



1. Screw the screws into the wall-mounting holes on the back cover of the machine, leaving a step for the mounting plate.
2. Align the machine's screw holes with the hoist's holes and insert the hoist.
3. Position the machine according to its direction of movement.
4. Tighten the wall-mounting screws on the back of the mounting plate to prevent movement.