




Accessory diagram

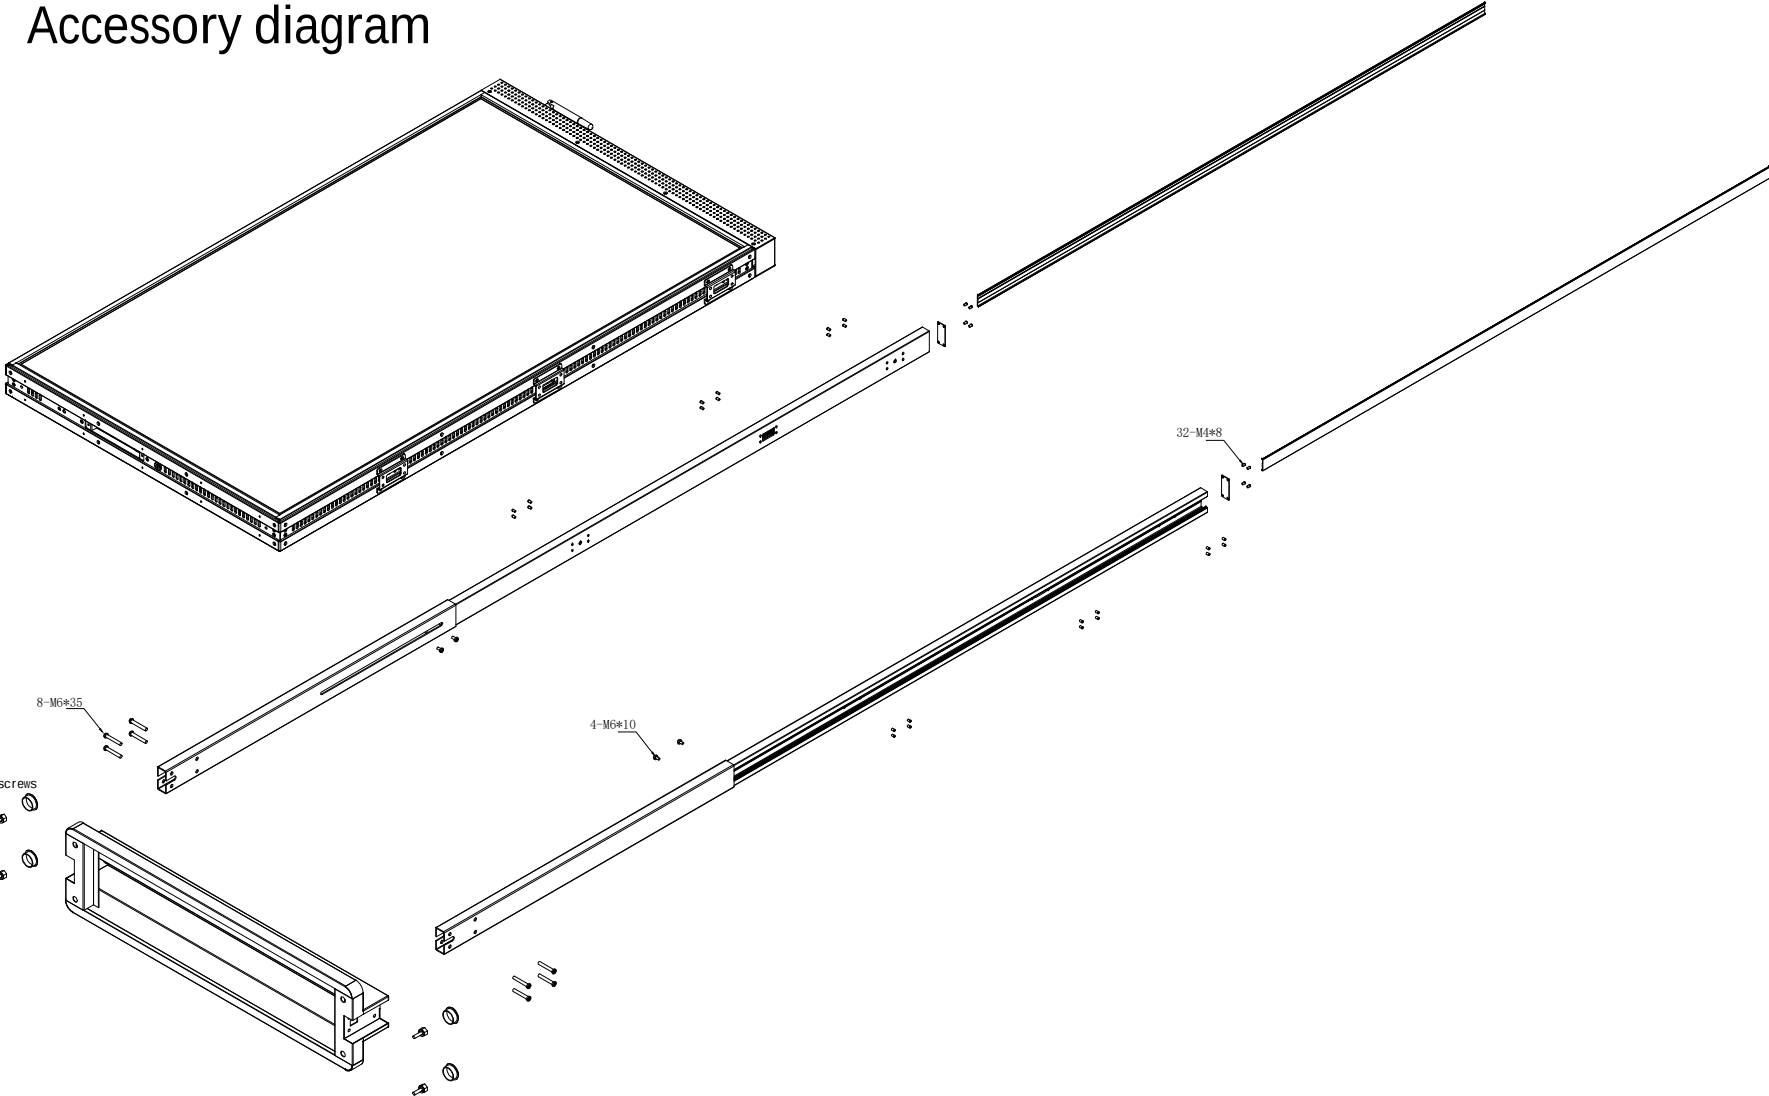


Telescopic rod assembly diagram

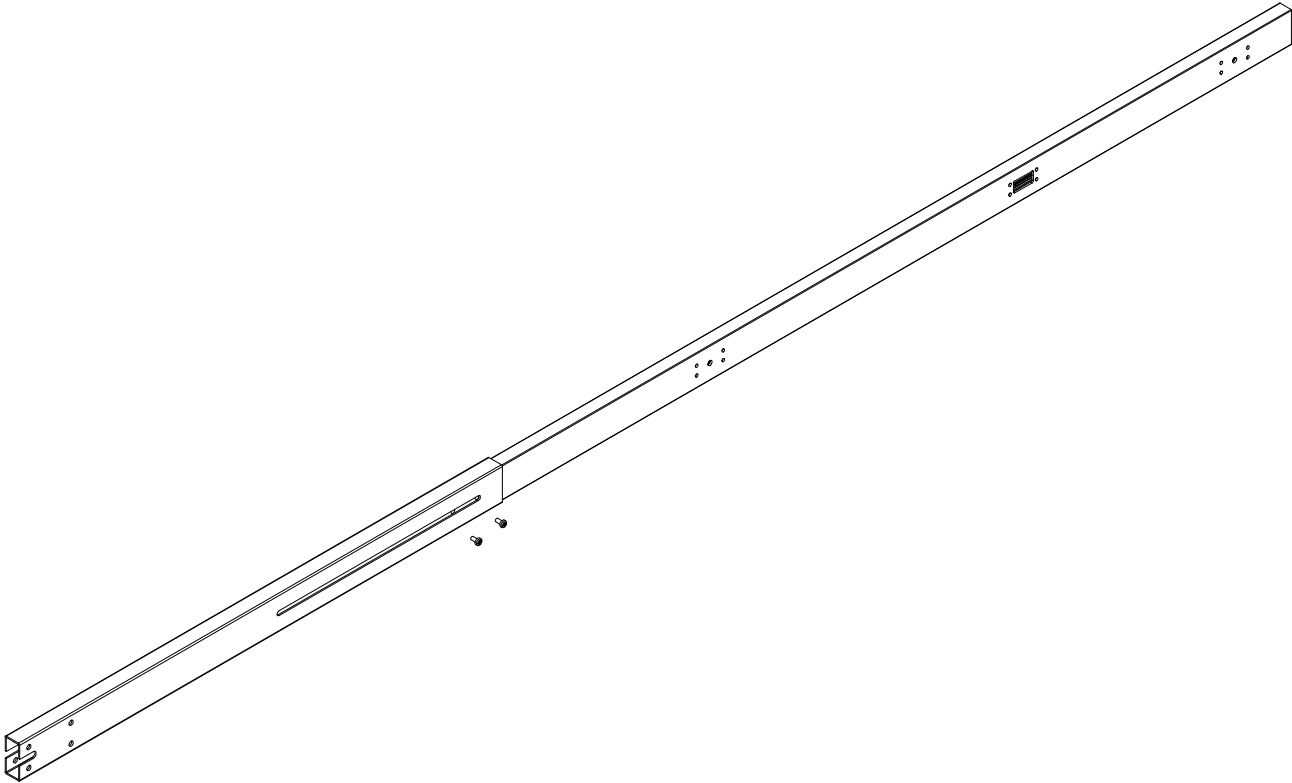


Screen and telescopic rod assembly diagram

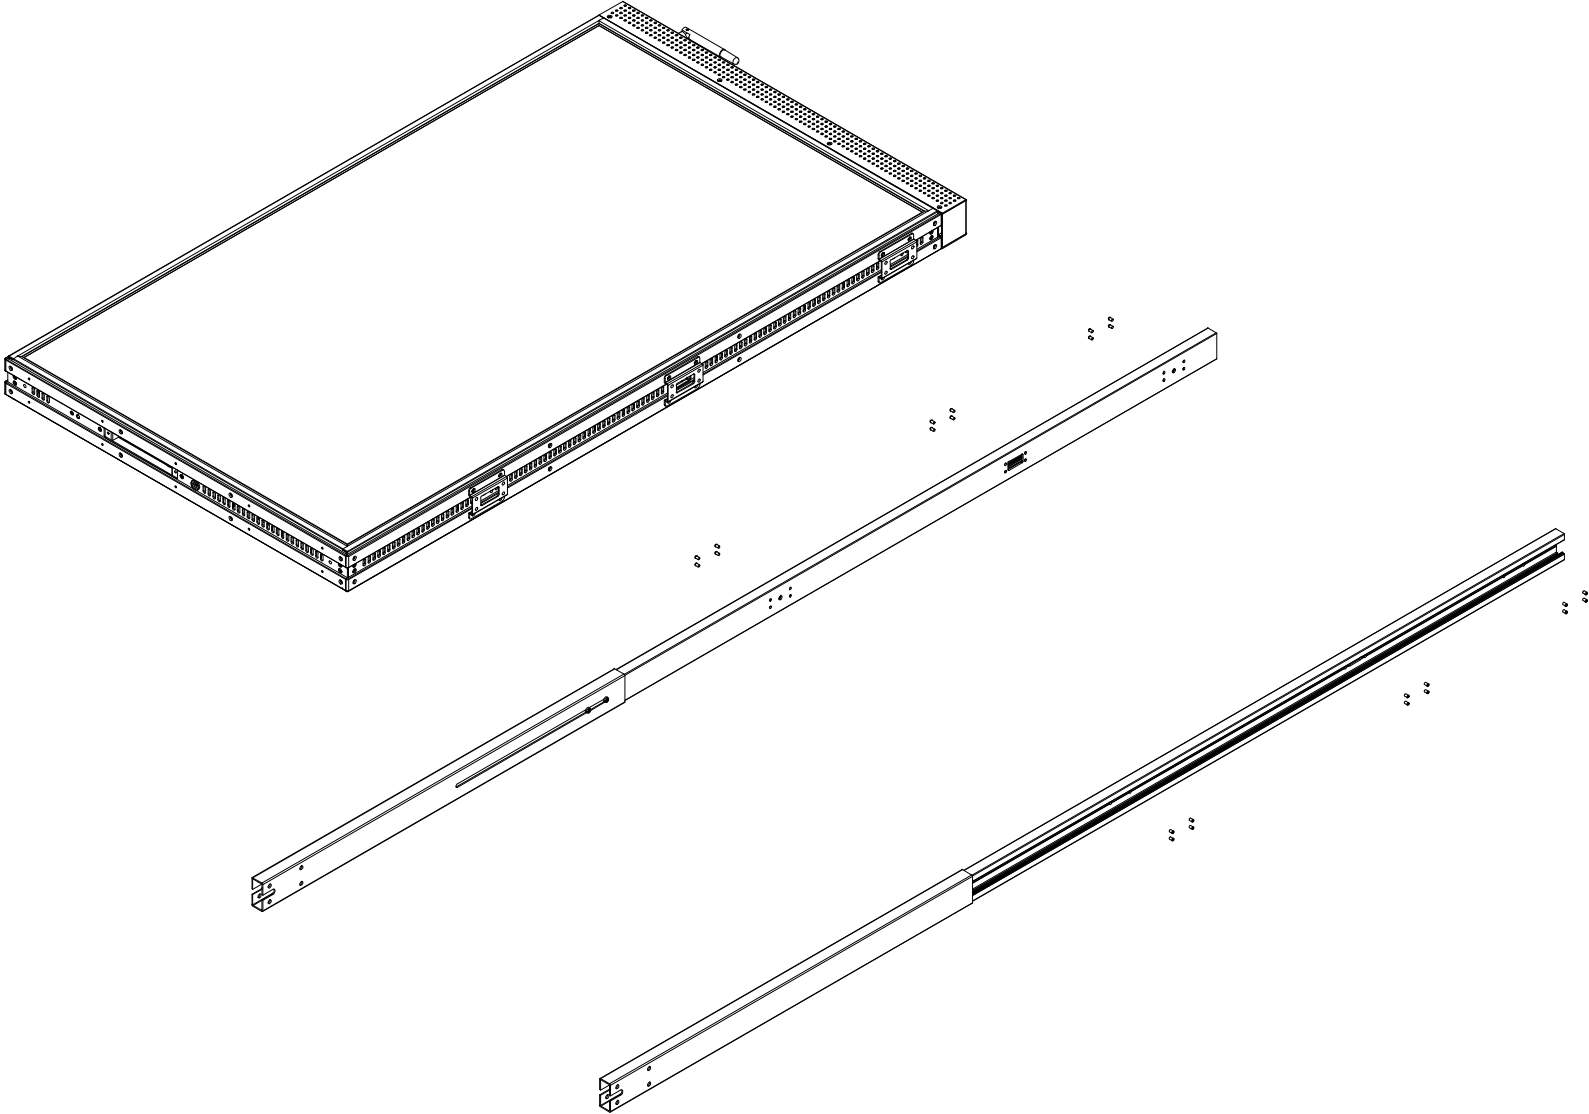


Screen and telescopic rod locking screw status

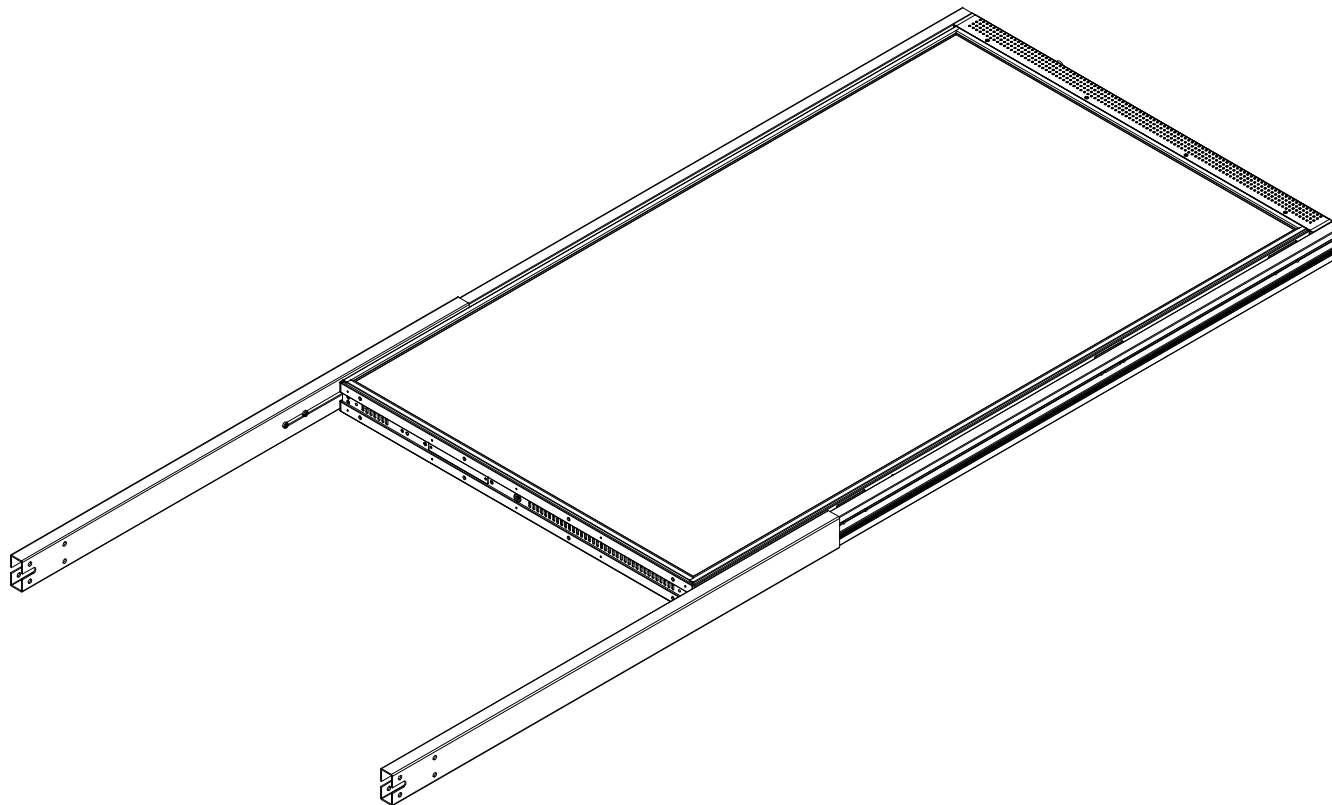


Before installing the base, the internal external power cable and signal cable are thrown out in advance and led to the bottom of the base along the inside of the telescopic rod

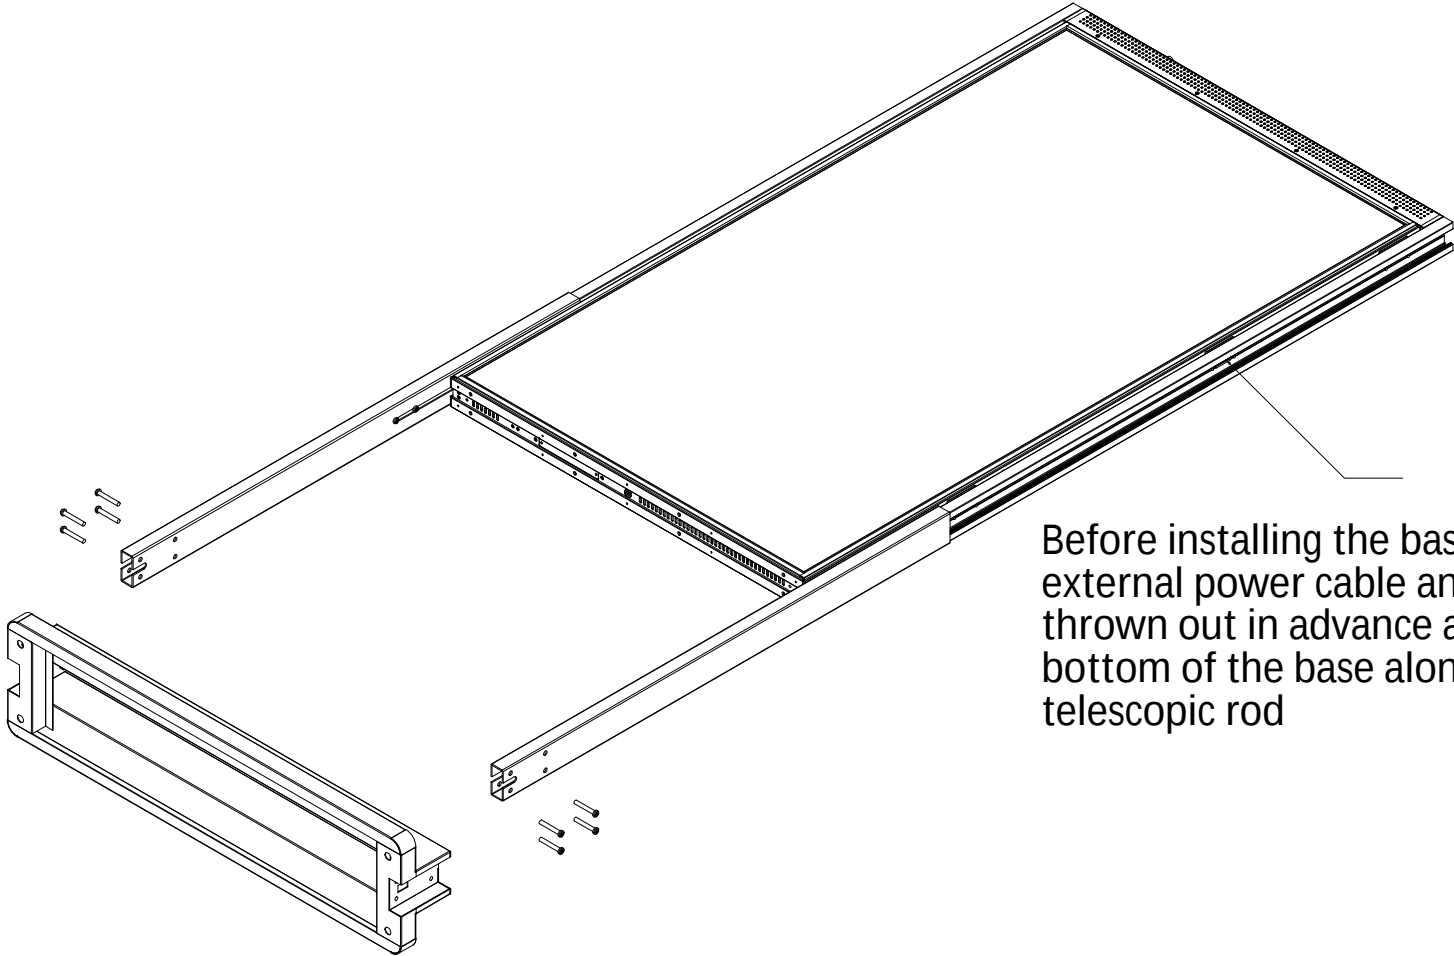


Base and screen locking screw status

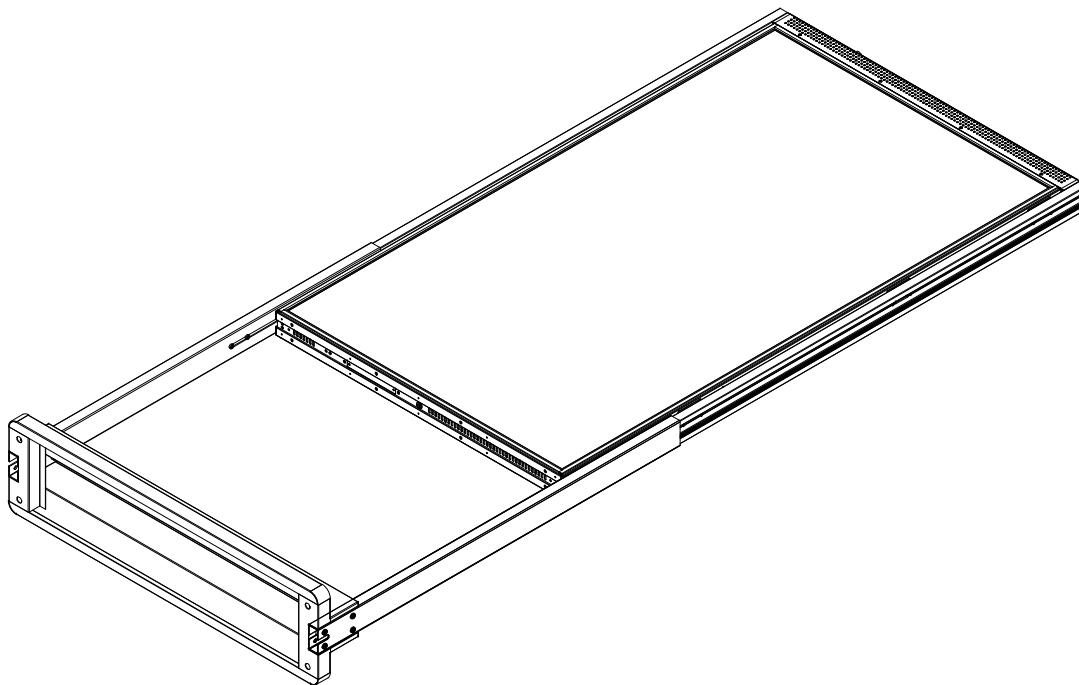


Insert the decorative cover back into the telescopic rod to cover the power cable

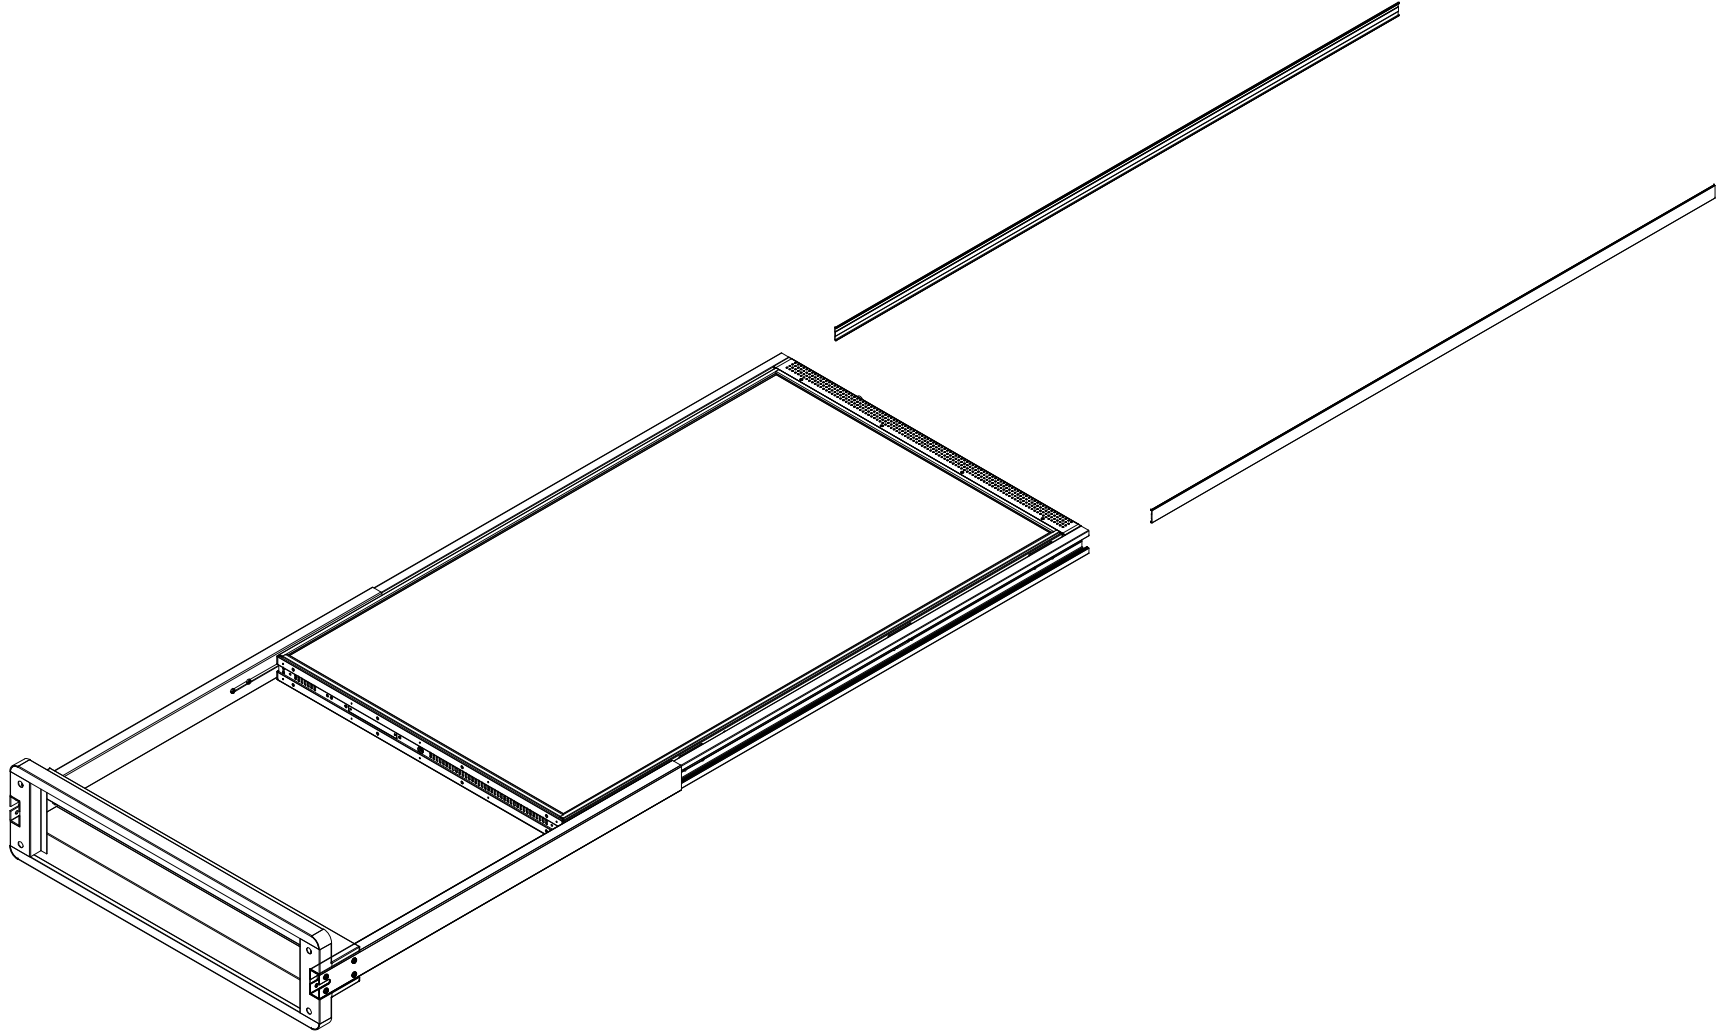


Lock the decorative cover limiter with screws

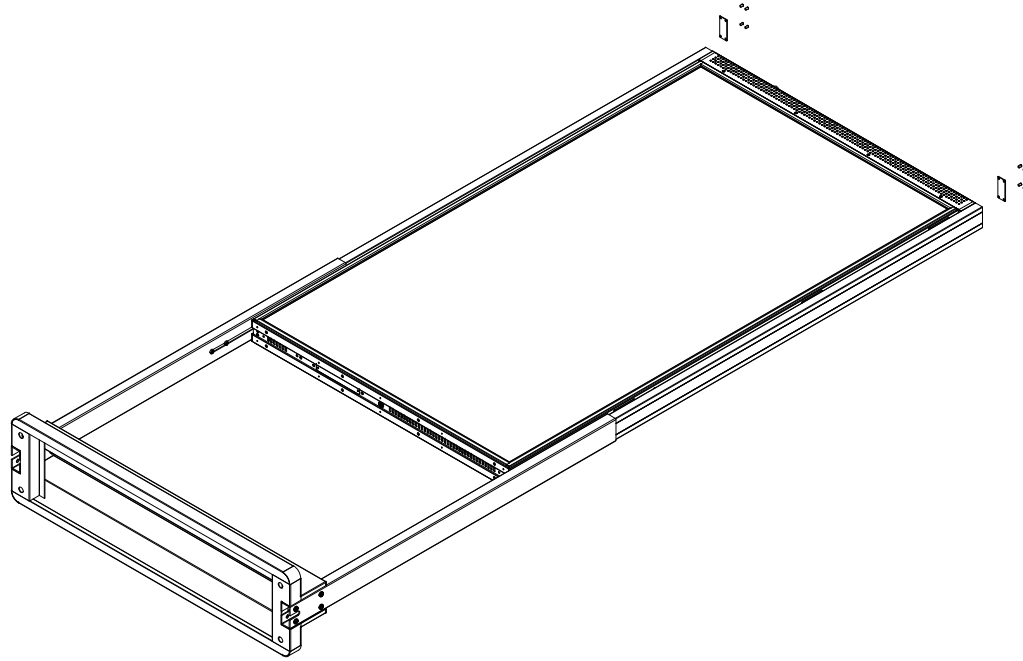

Assembly completed

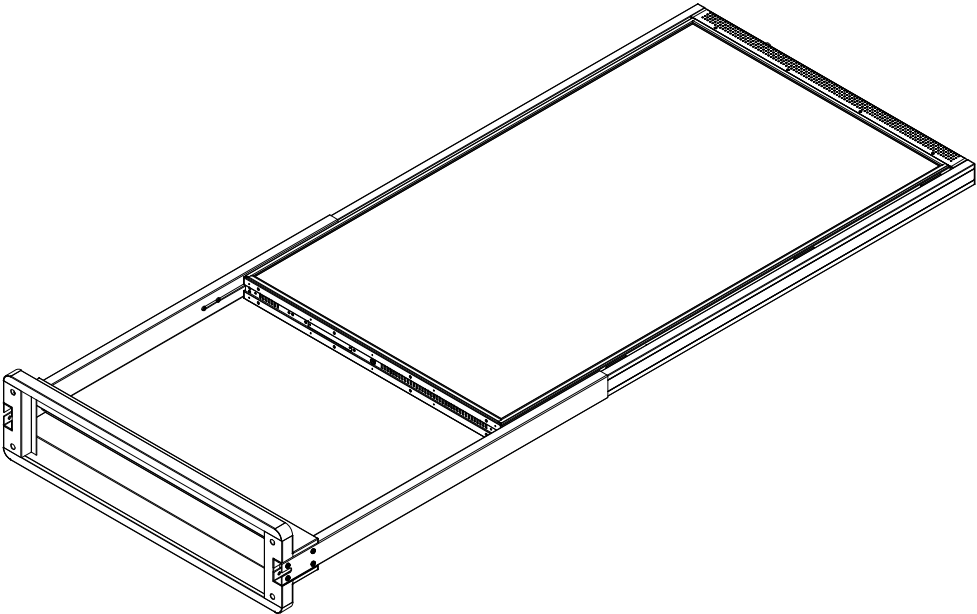

Base locking ground expansion screws

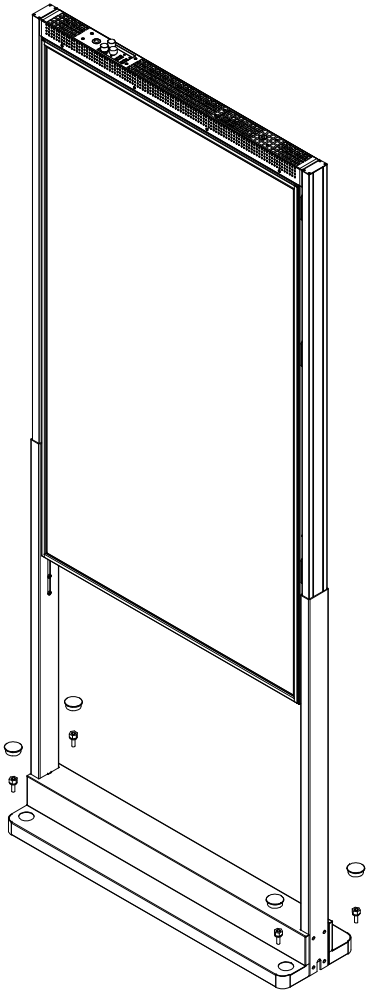

Base expansion screw shielding cover closed, machine on-site installation completed

