

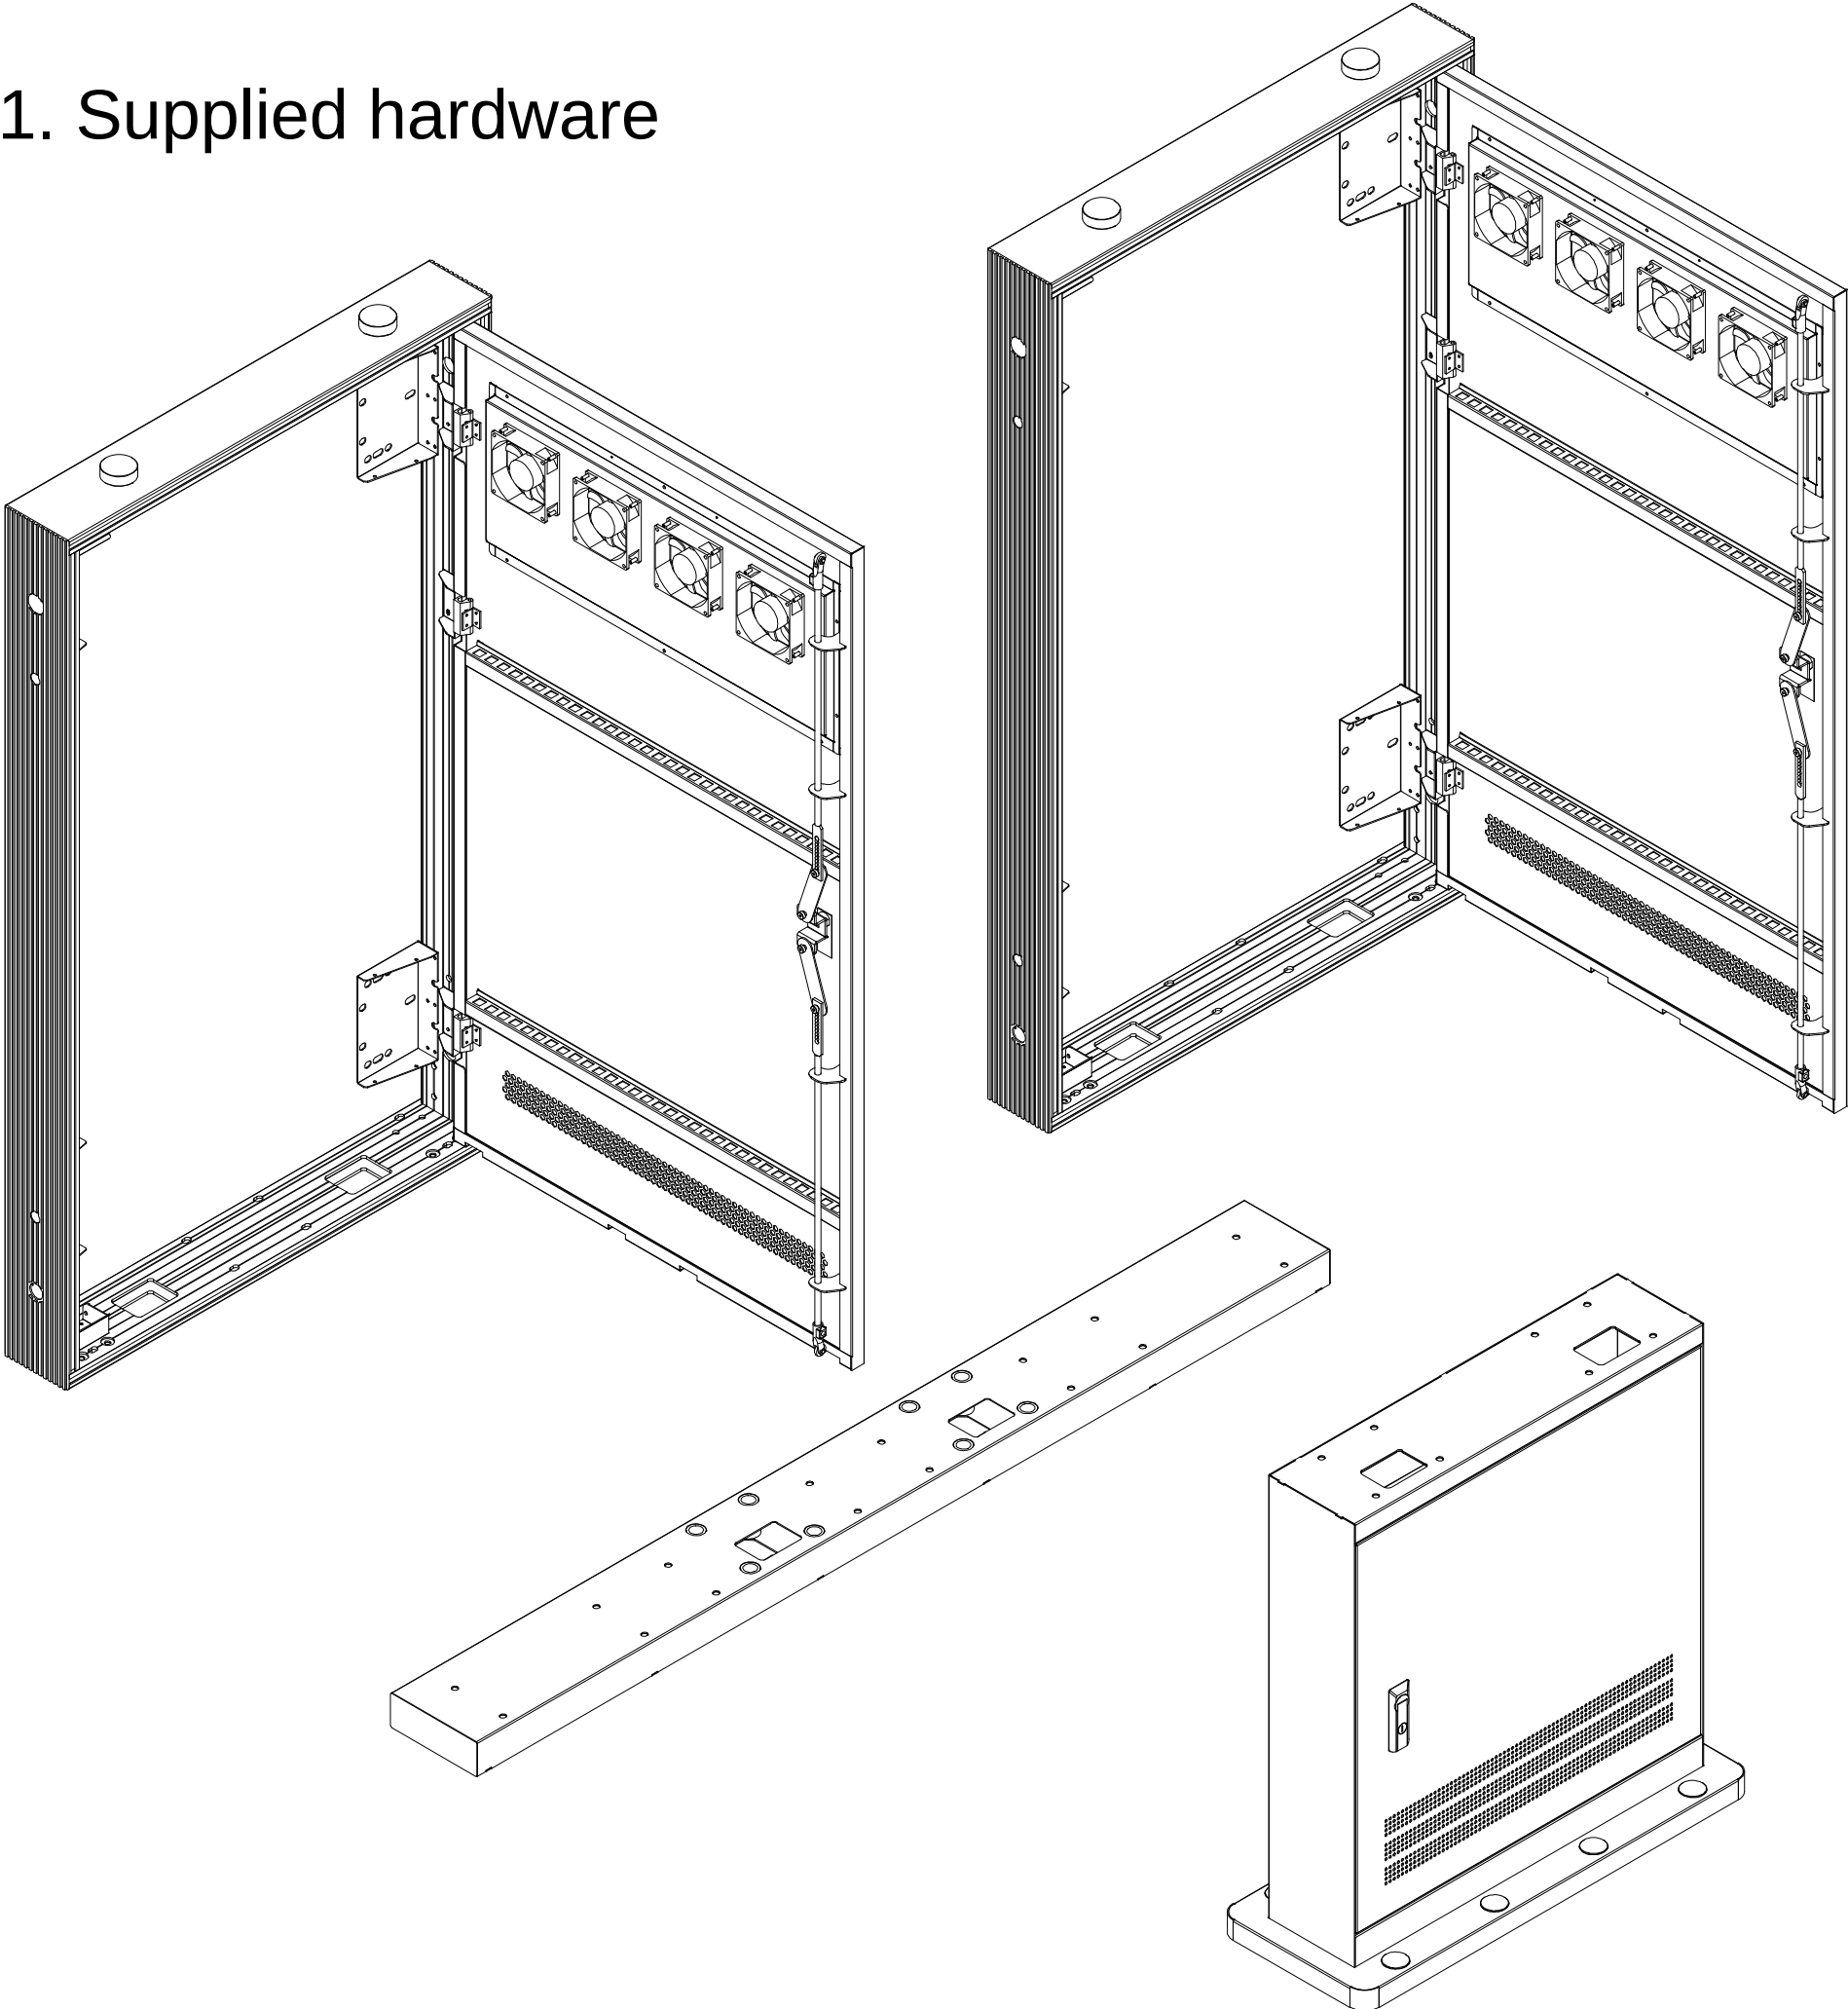


1. Supplied hardware

- M10 x 100 expansion anchors (8 pcs)
- Silicone plugs (8 pcs)
- M8 x 10 hex socket screws (16 pcs)
- M8 x 40 hex socket screws (24 pcs)
- M8 x 50 hex socket screws (2 pcs)
- M8 locking nuts (2 pcs)

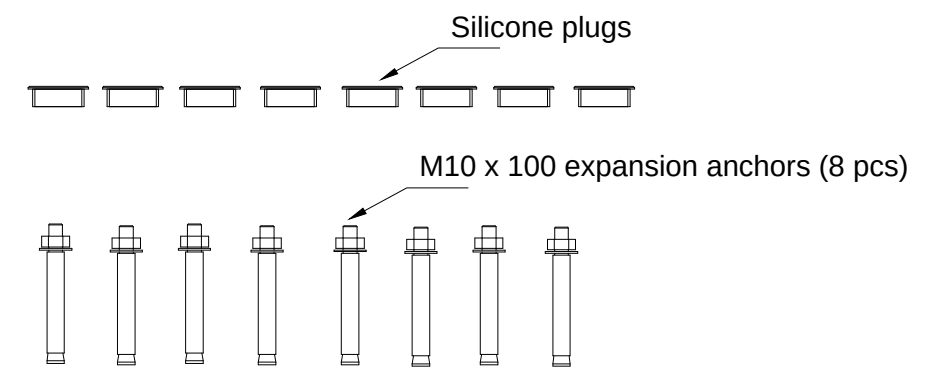


2. Drill the floor holes

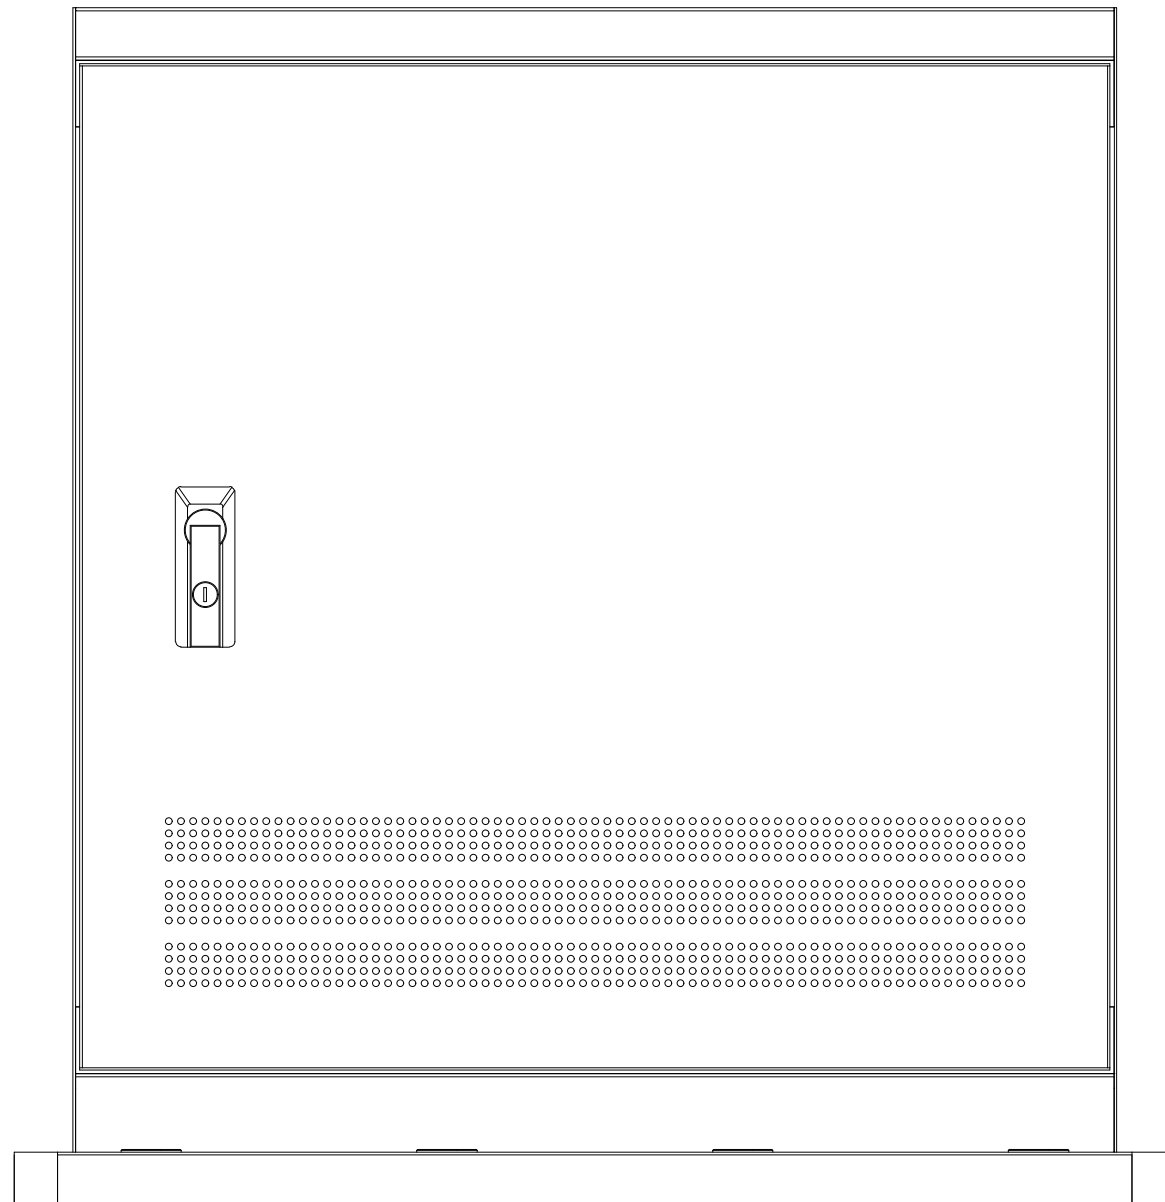




Drill with a 12 mm bit

Ground


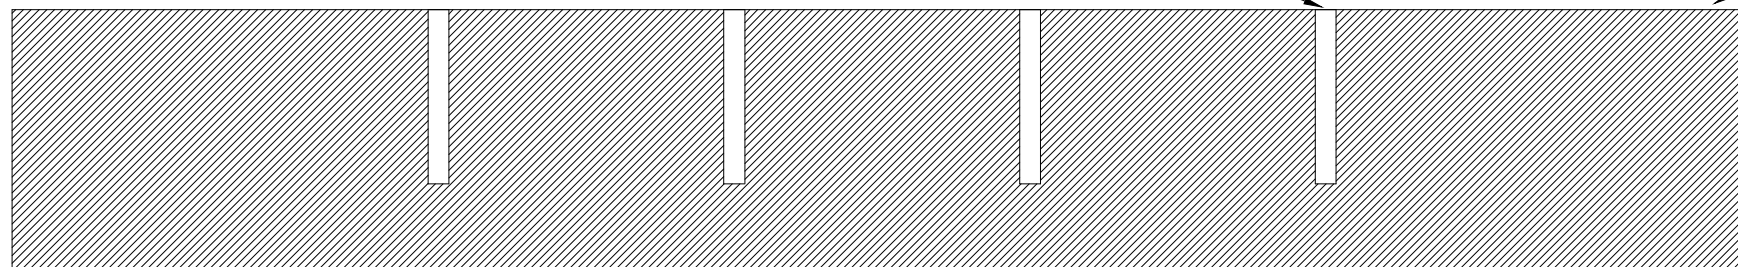


3. Secure the pedestal and connect the supply cable




M8 x 40 hex socket screws (8 pcs)

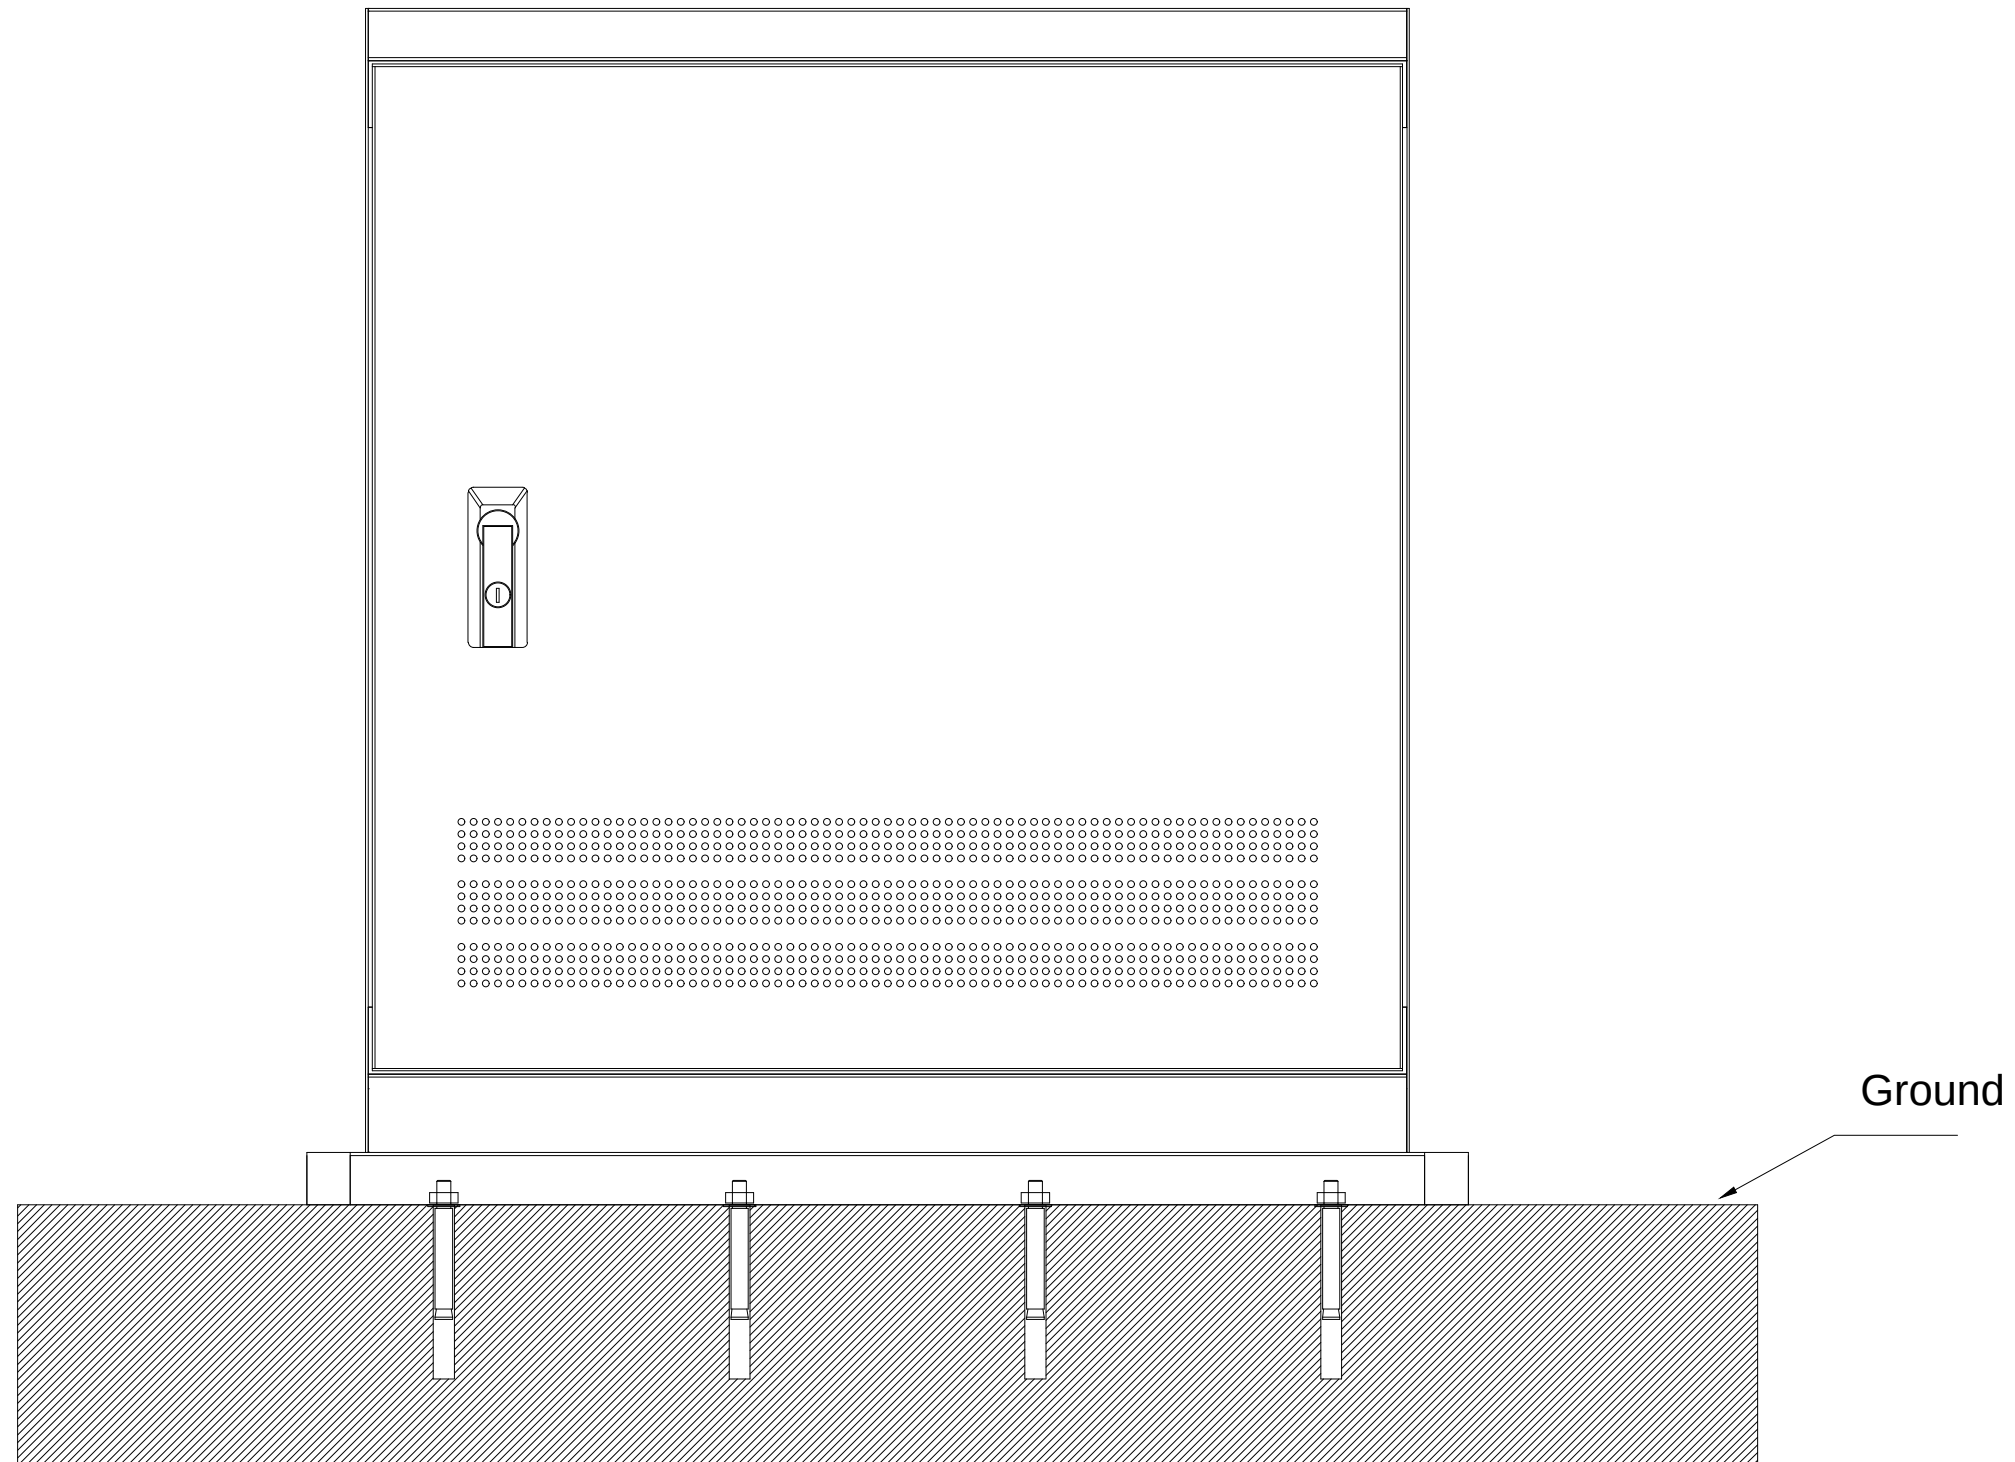




4. Fasten the support brackets

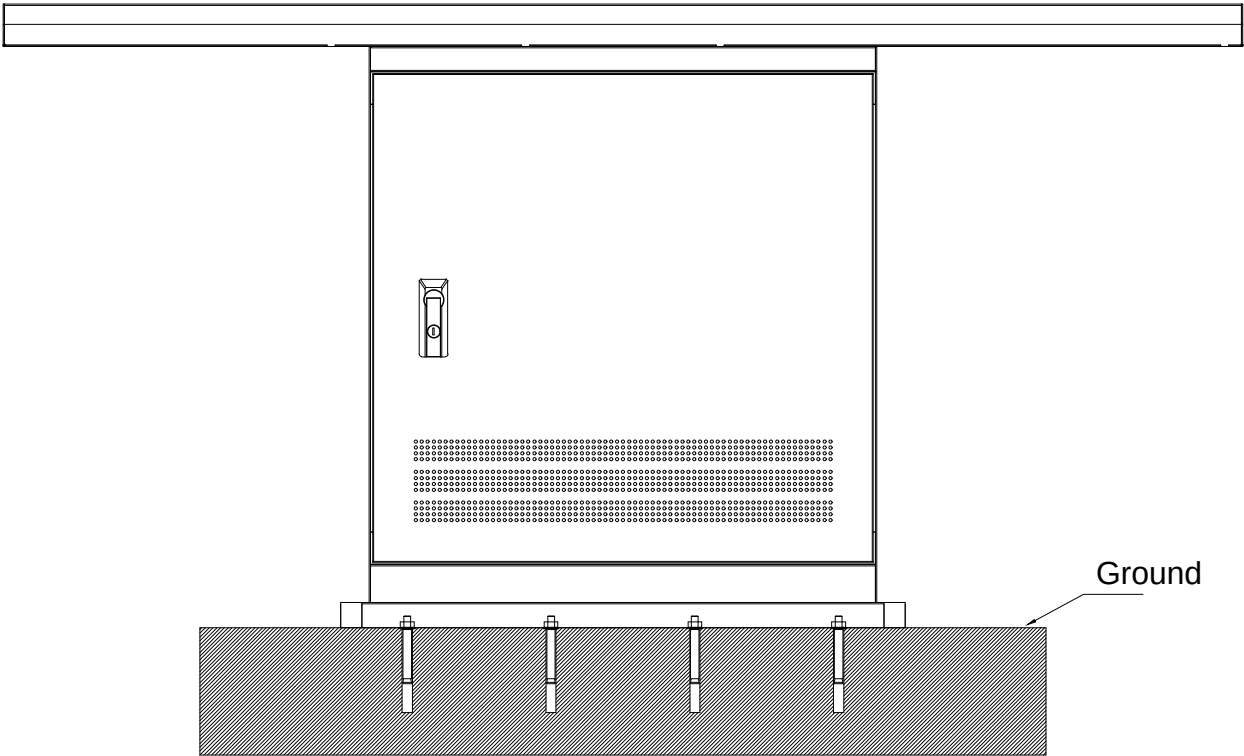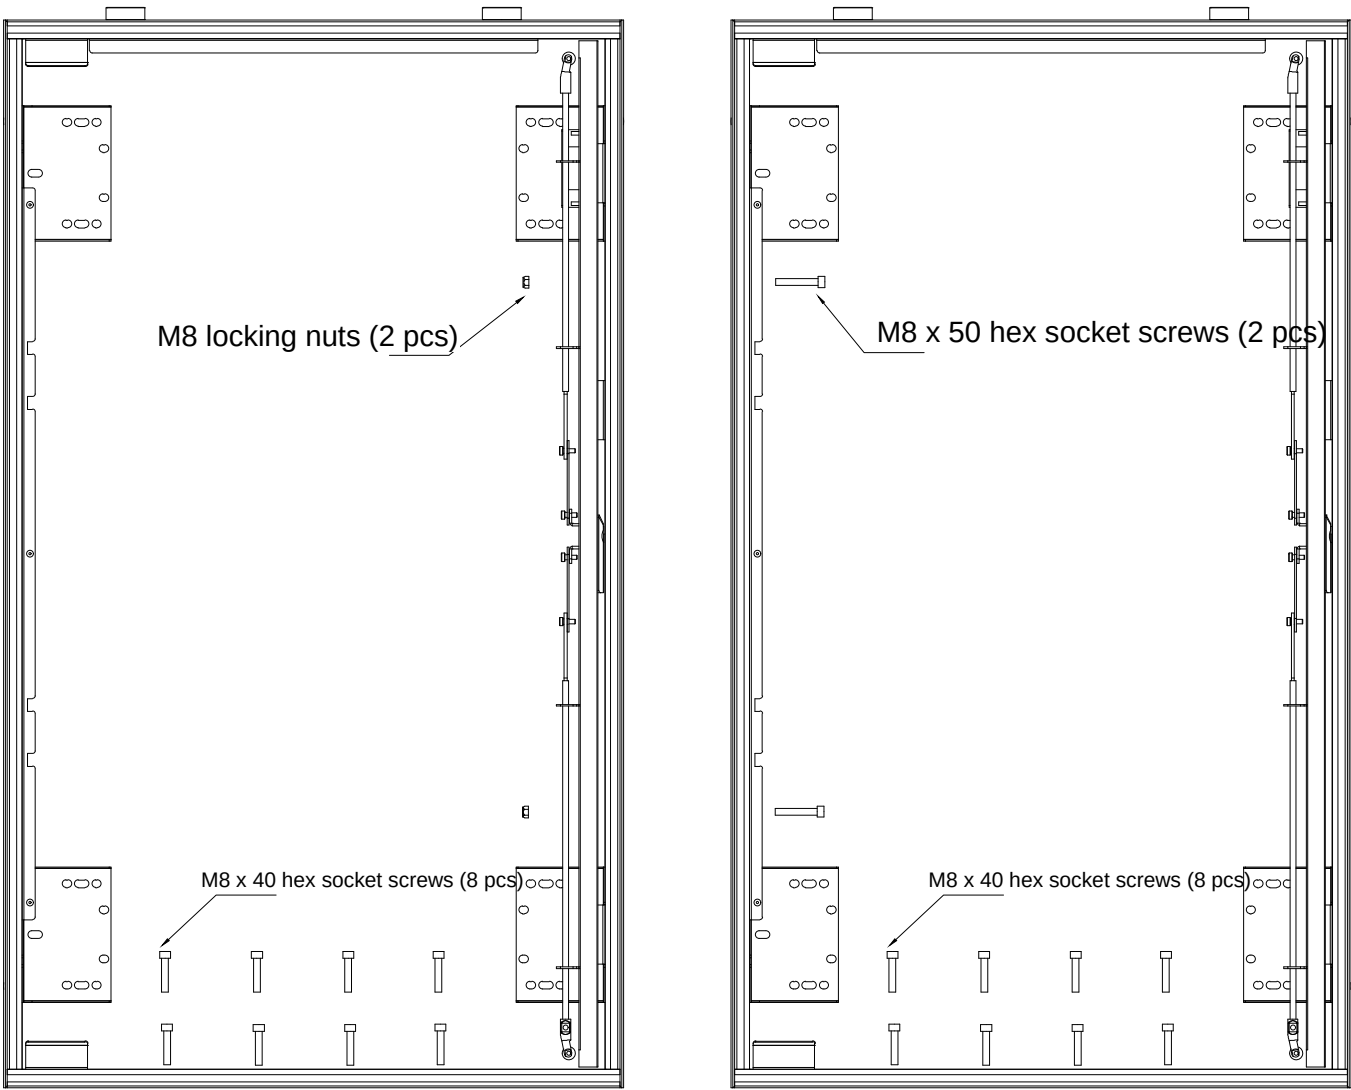

5. Secure the display frames

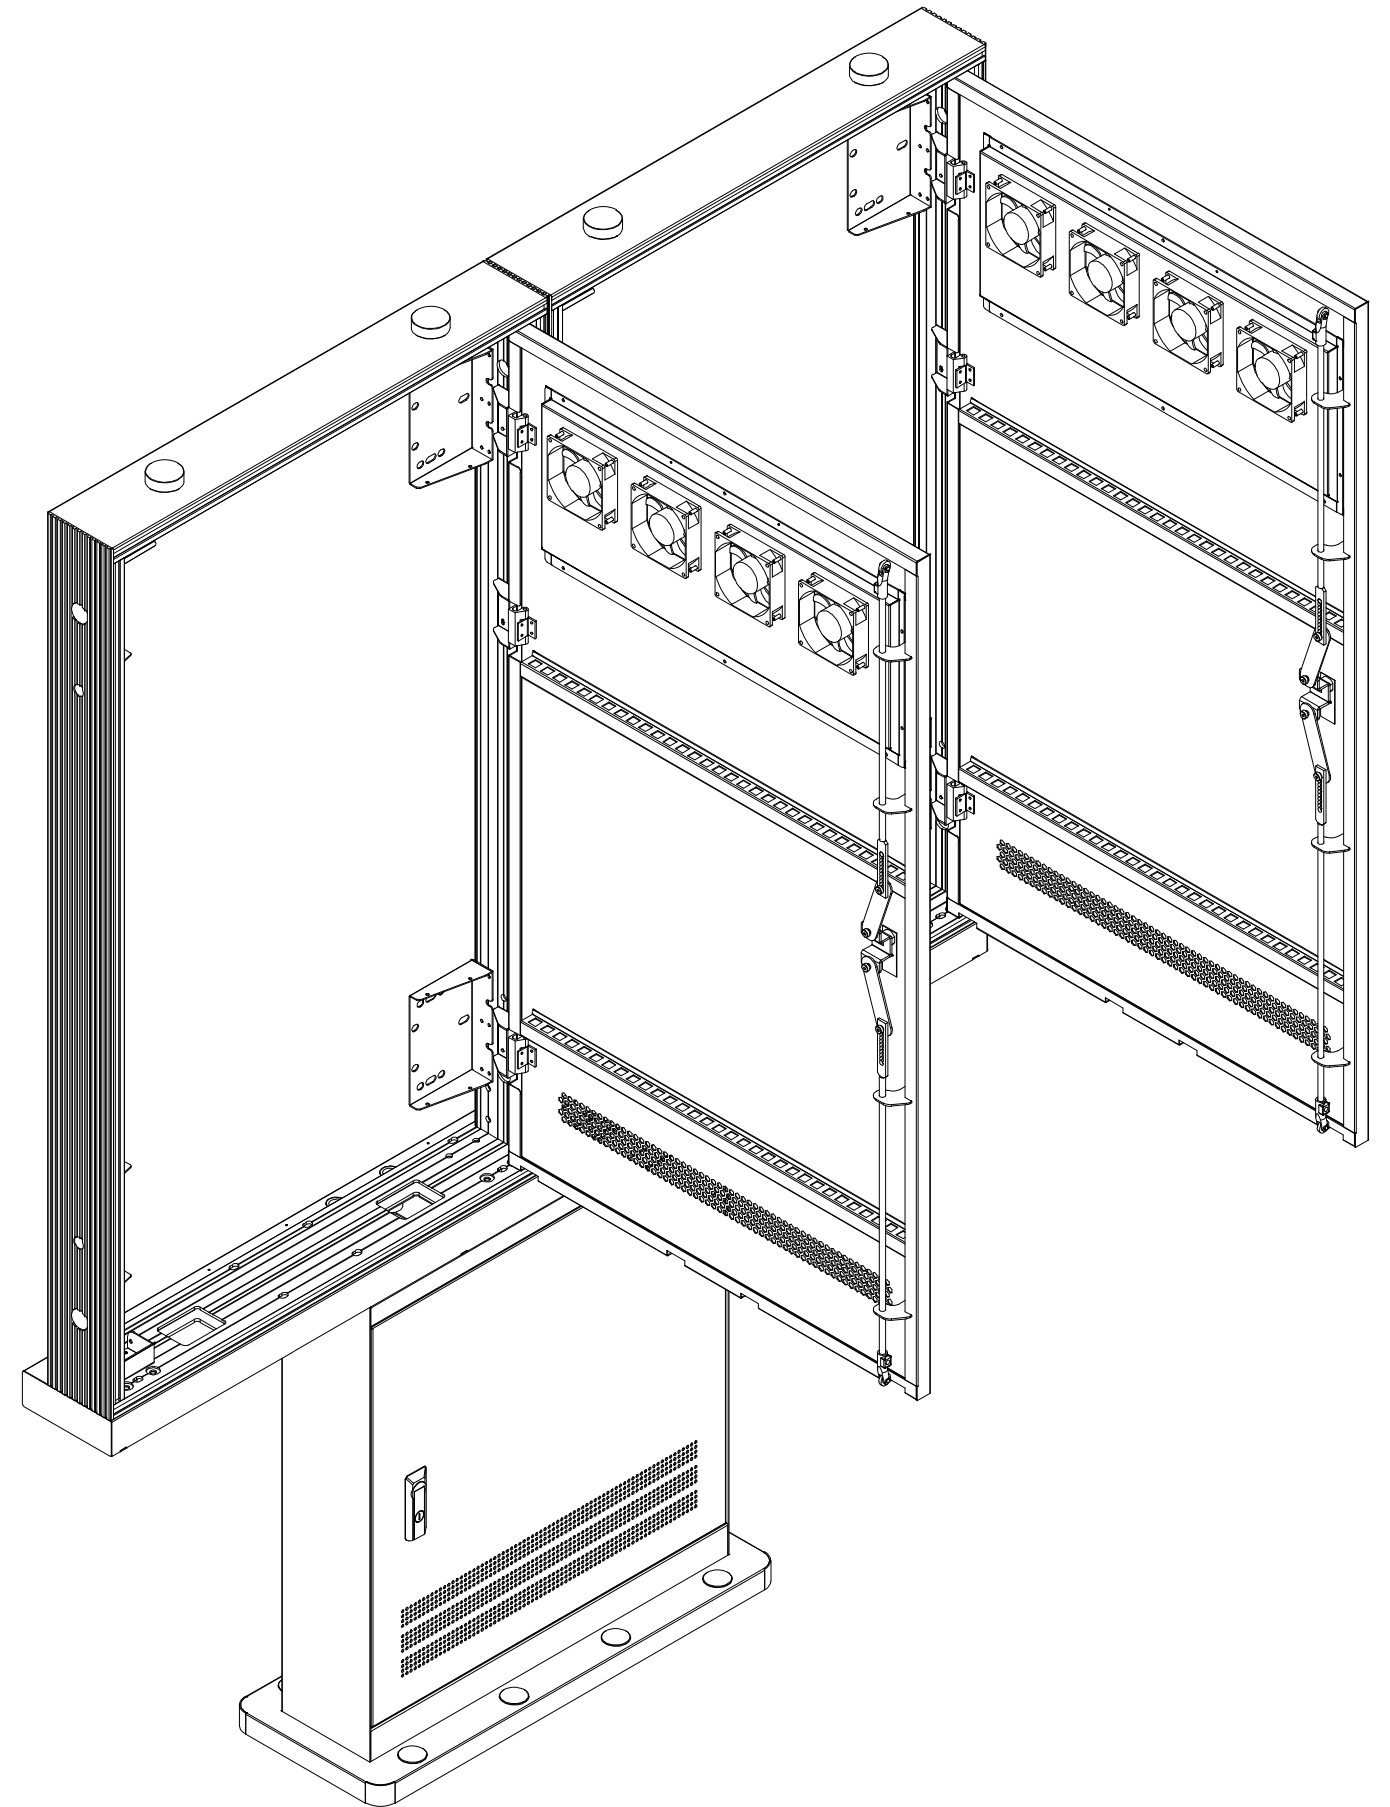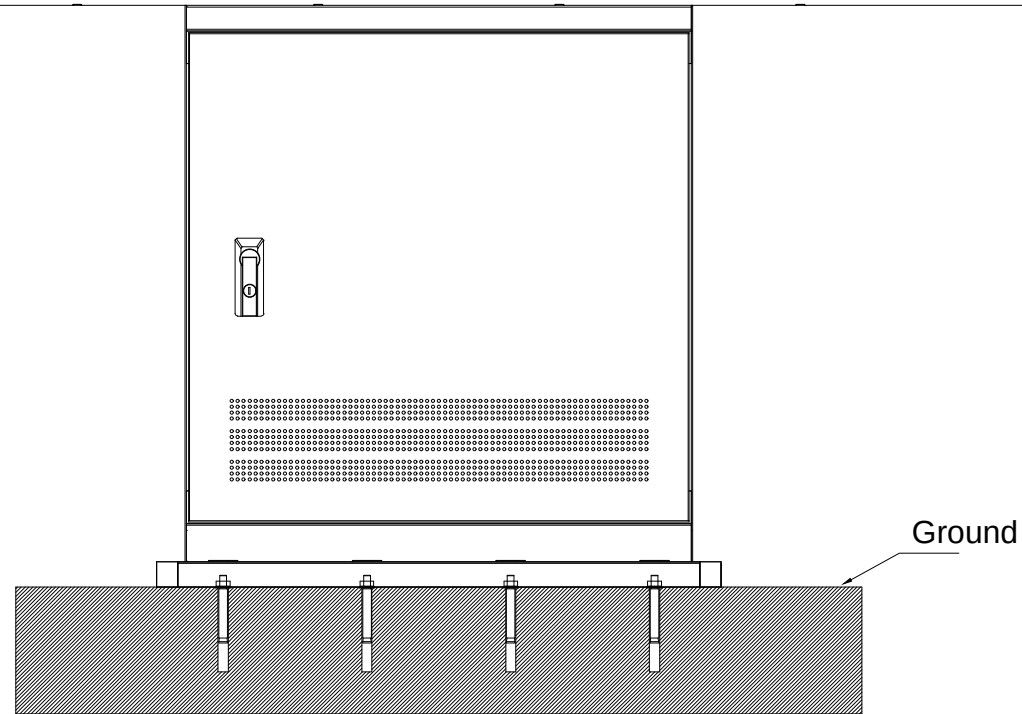
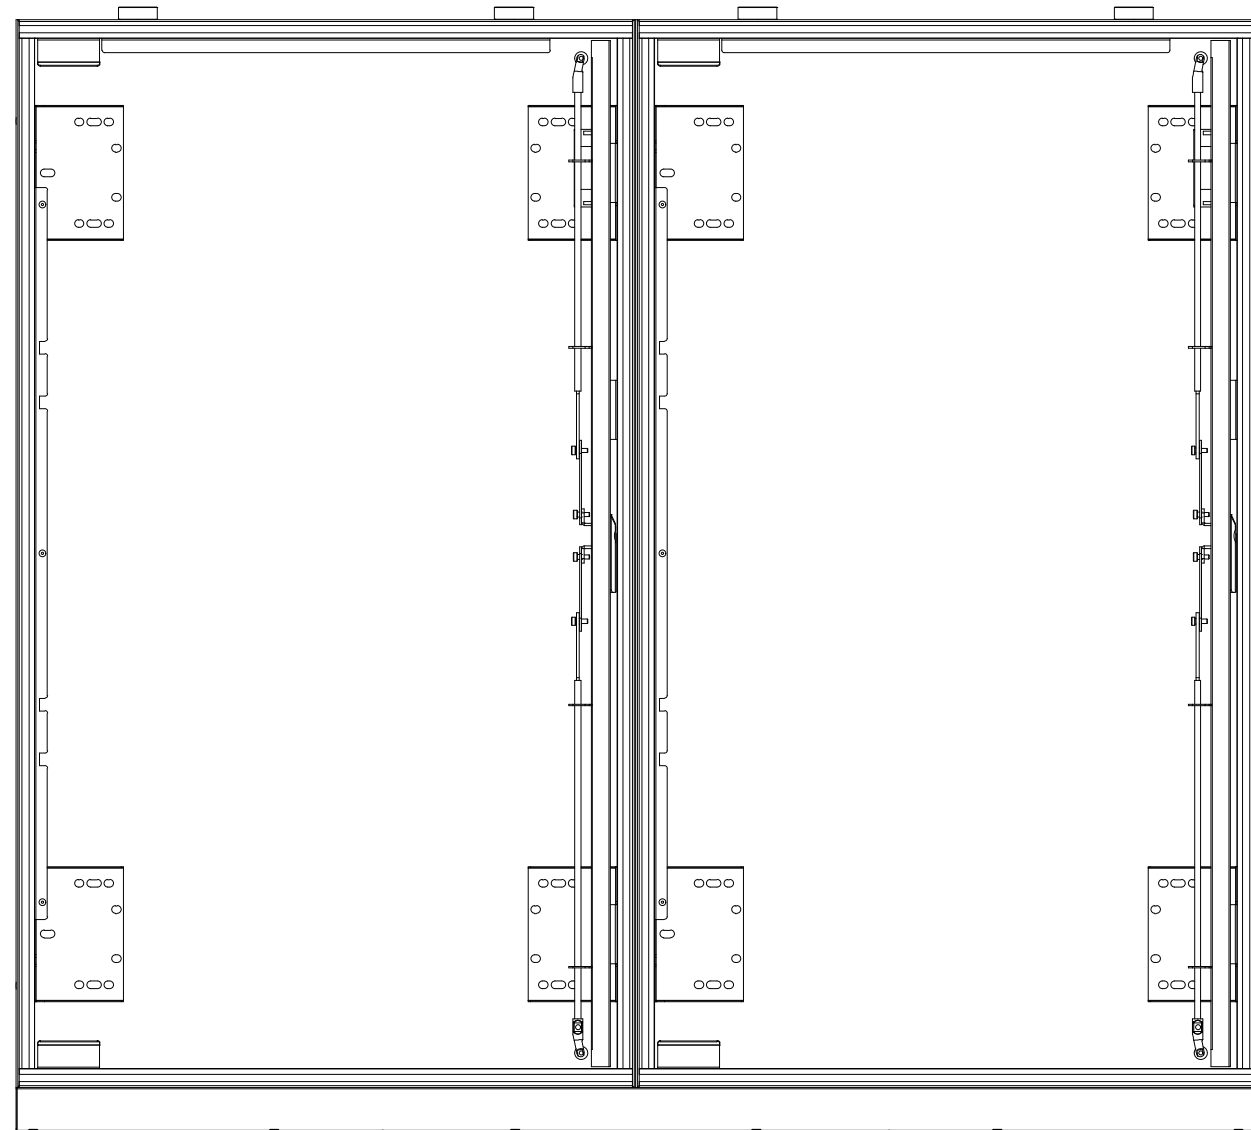


6. Install the displays


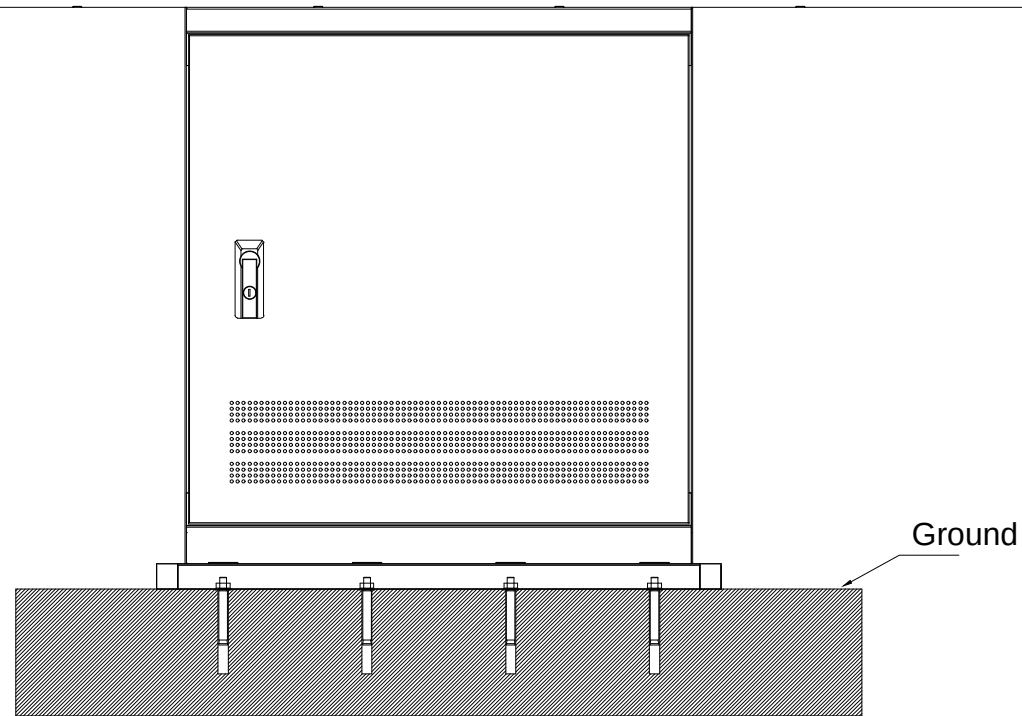
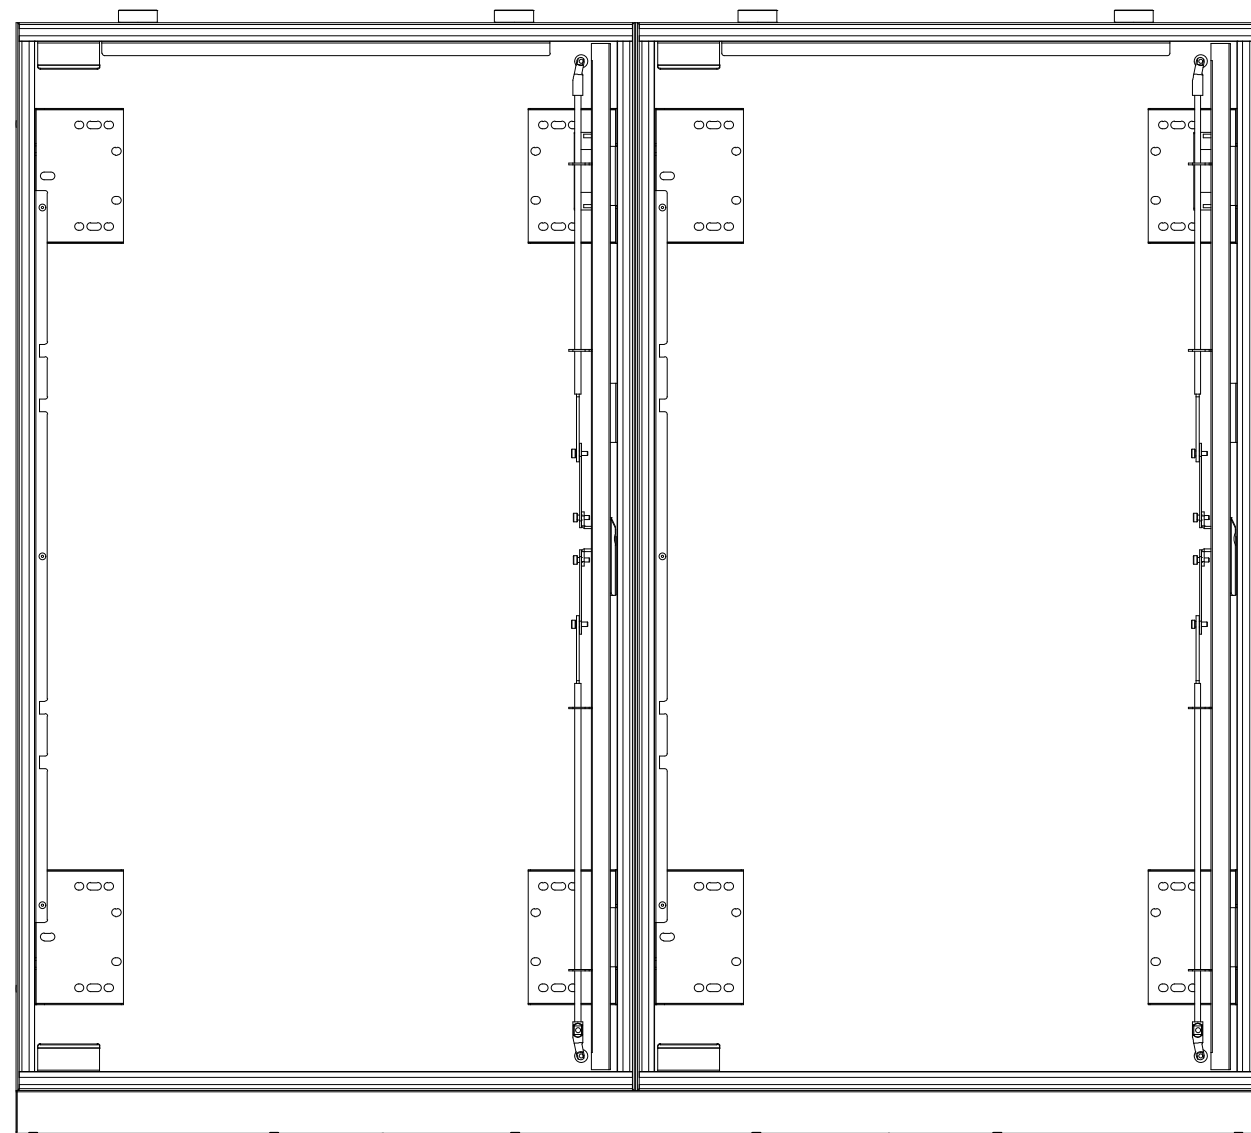


IP66 display

M8 x 10 hex socket screws (16 pcs)

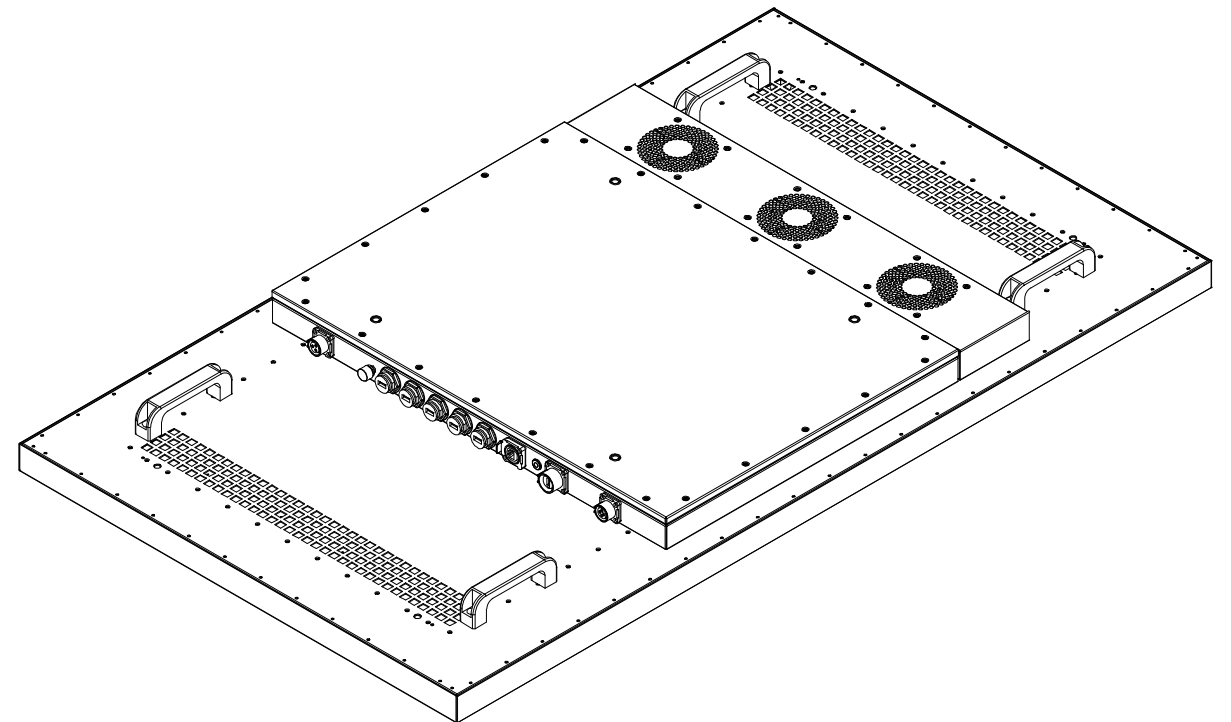

7. Connect power to the displays

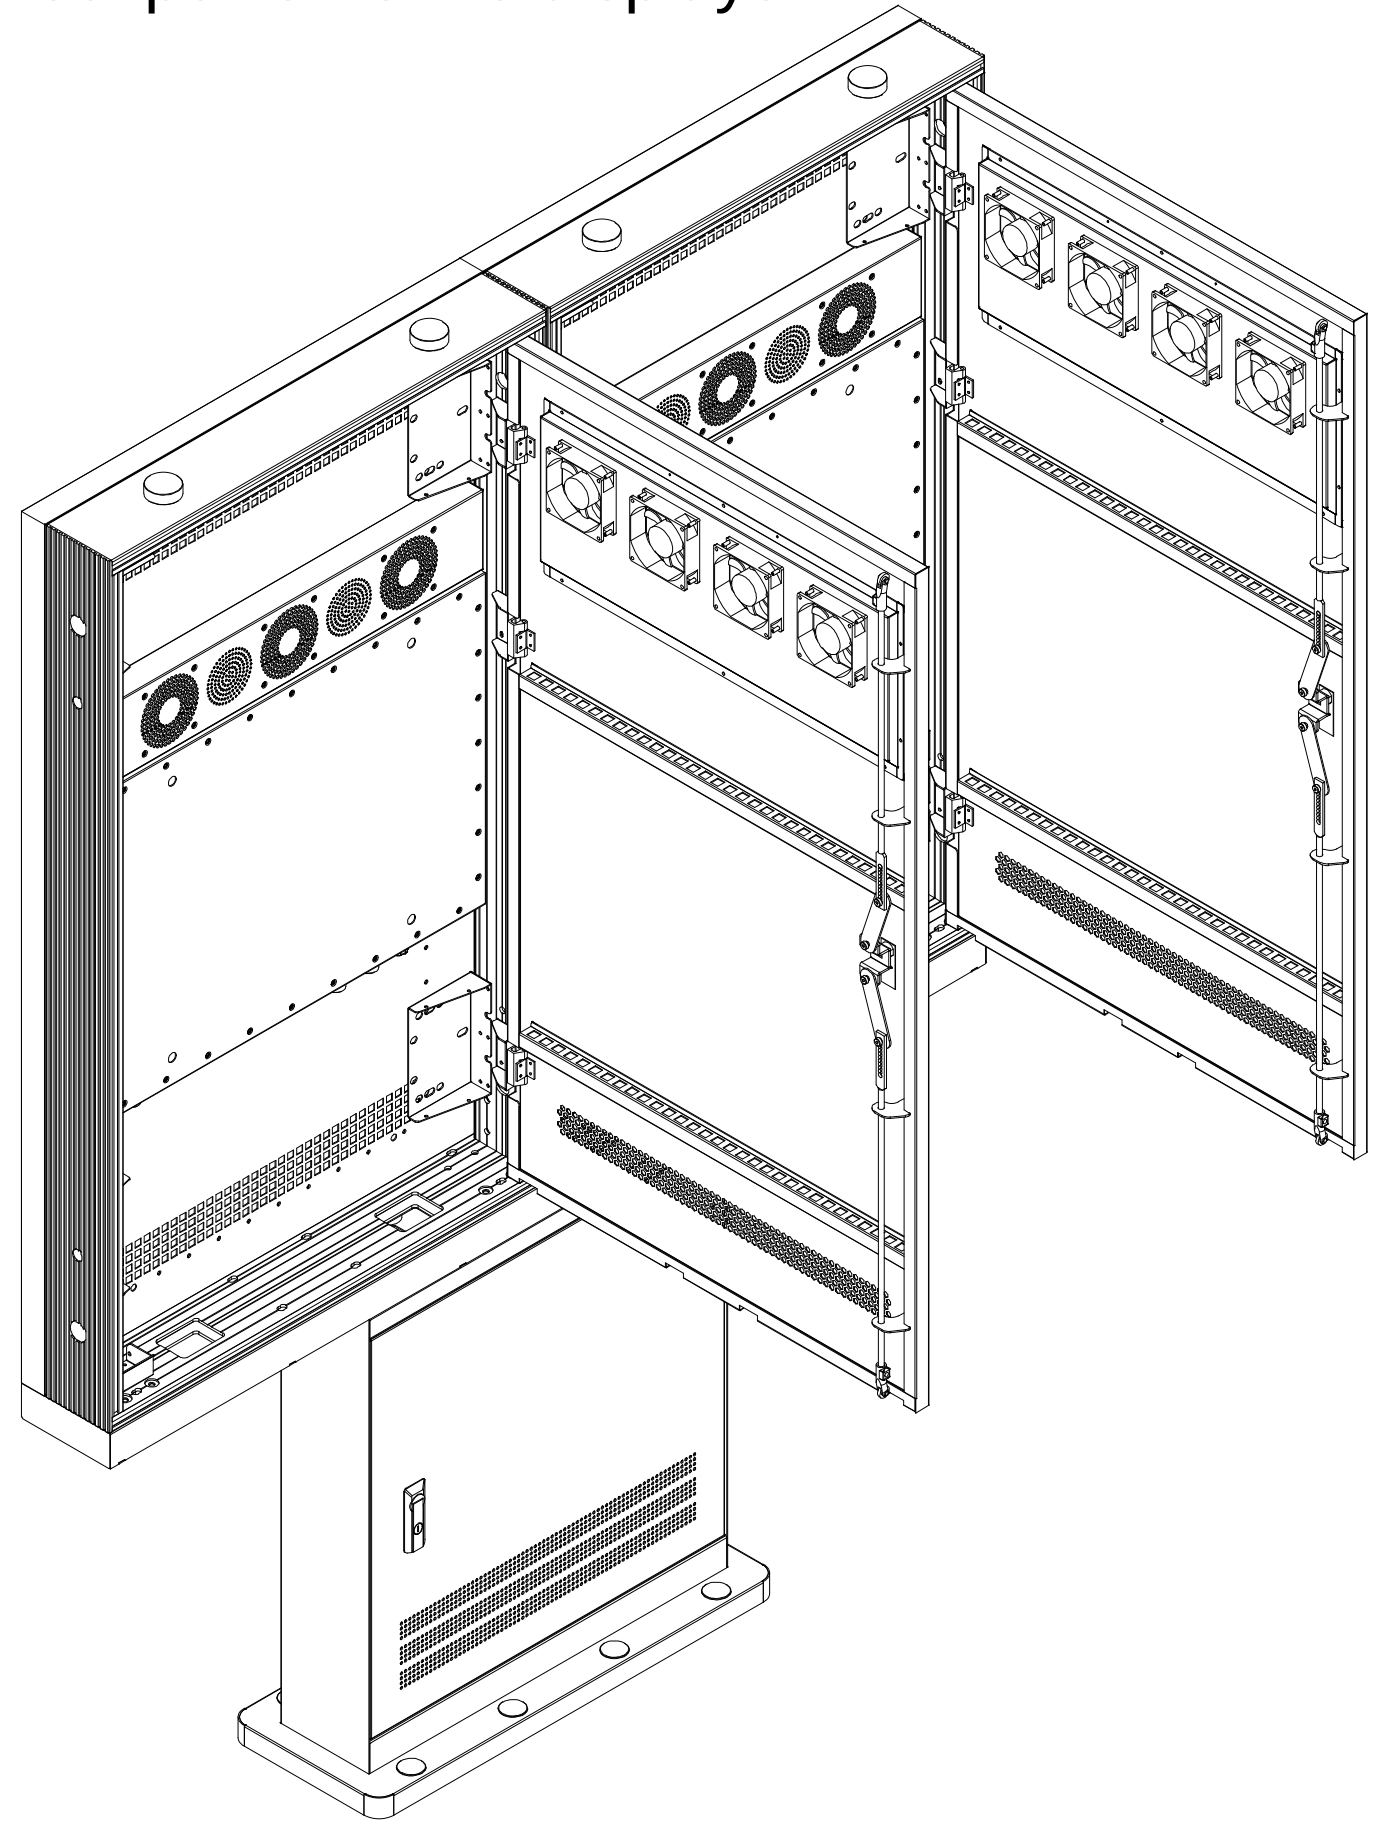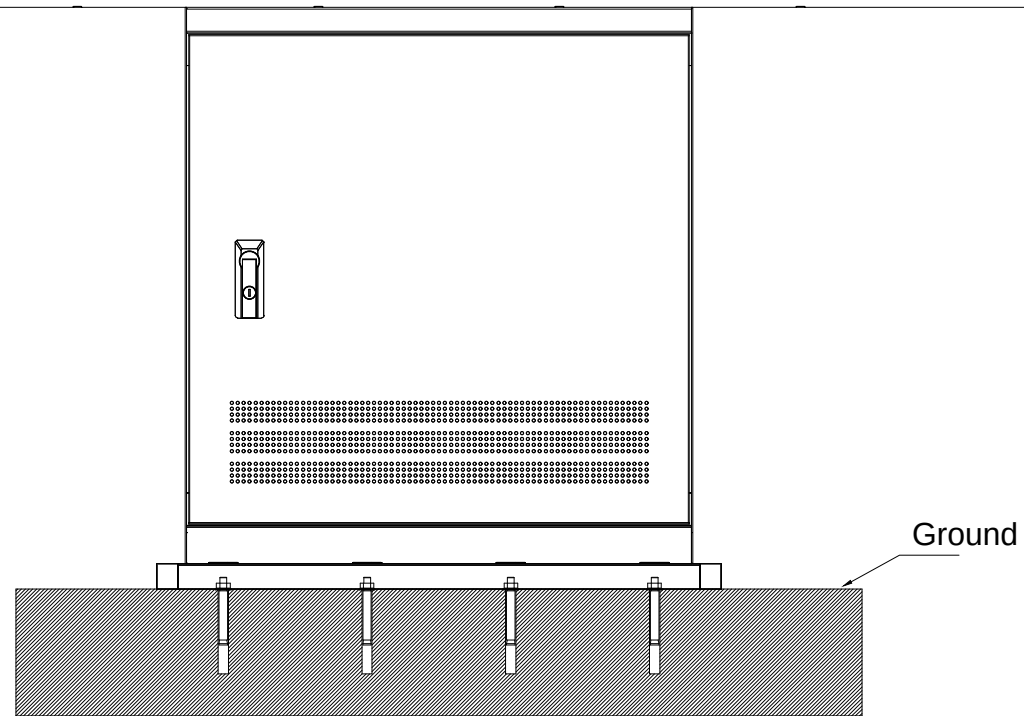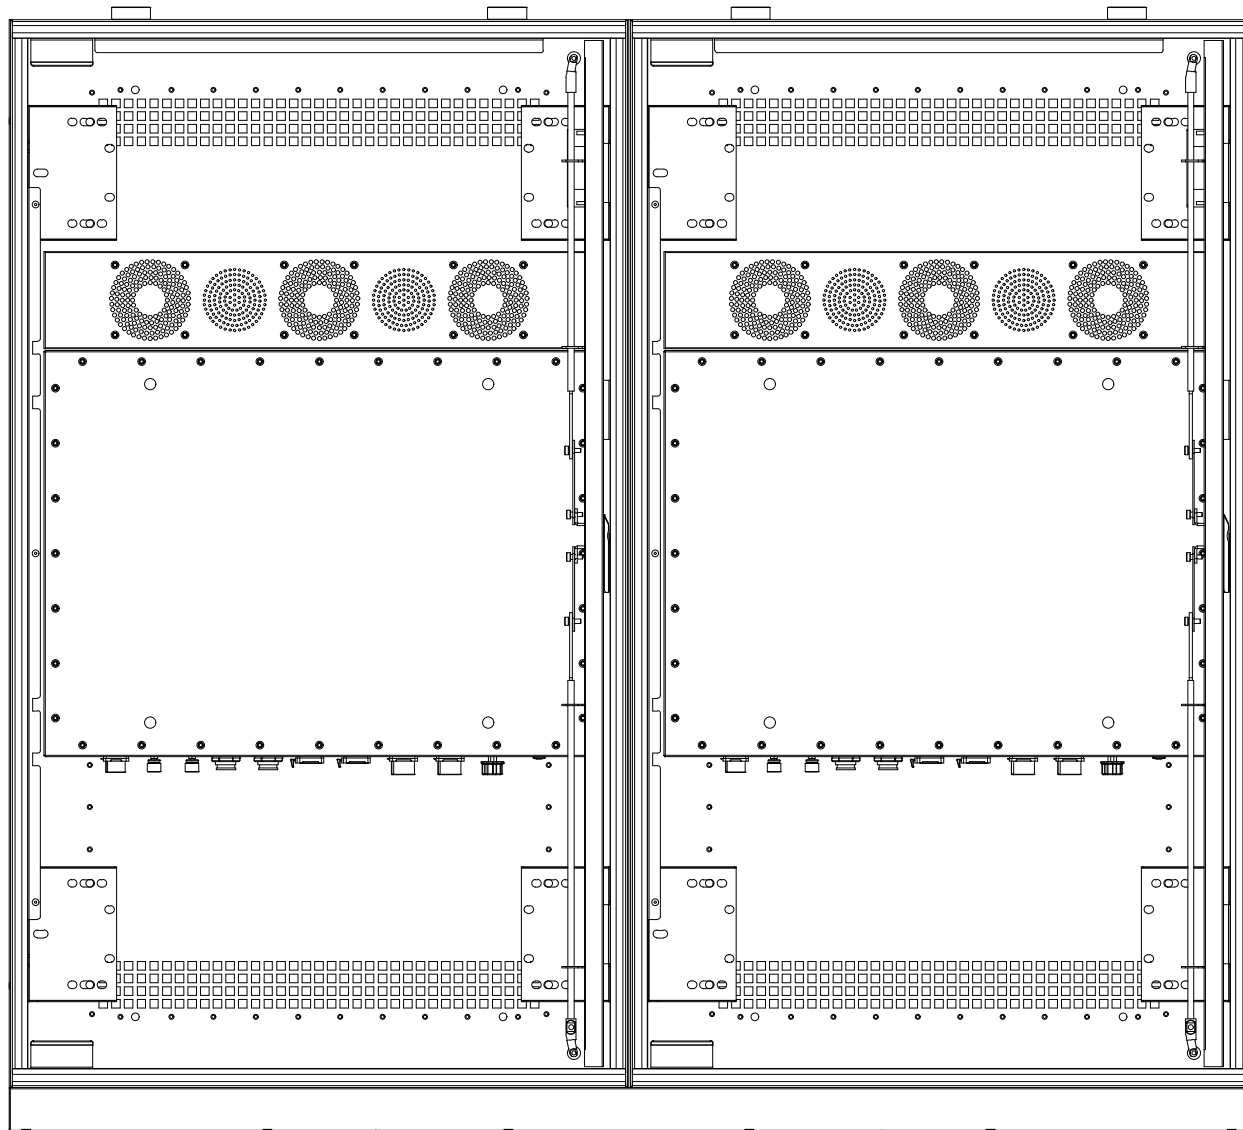

8. Installation complete

