1. Material details

M8 x 10 304 stainless steel screws

4PCS

Bracket

1PCS

M8 x 100 expansion screws

8PCS

Hook assembly

2PCS

Outdoor IP66 Display

1PCS

2. Drill holes in the wall, dimensions as shown in the diagram below

3. Install M10 x 100 expansion screws
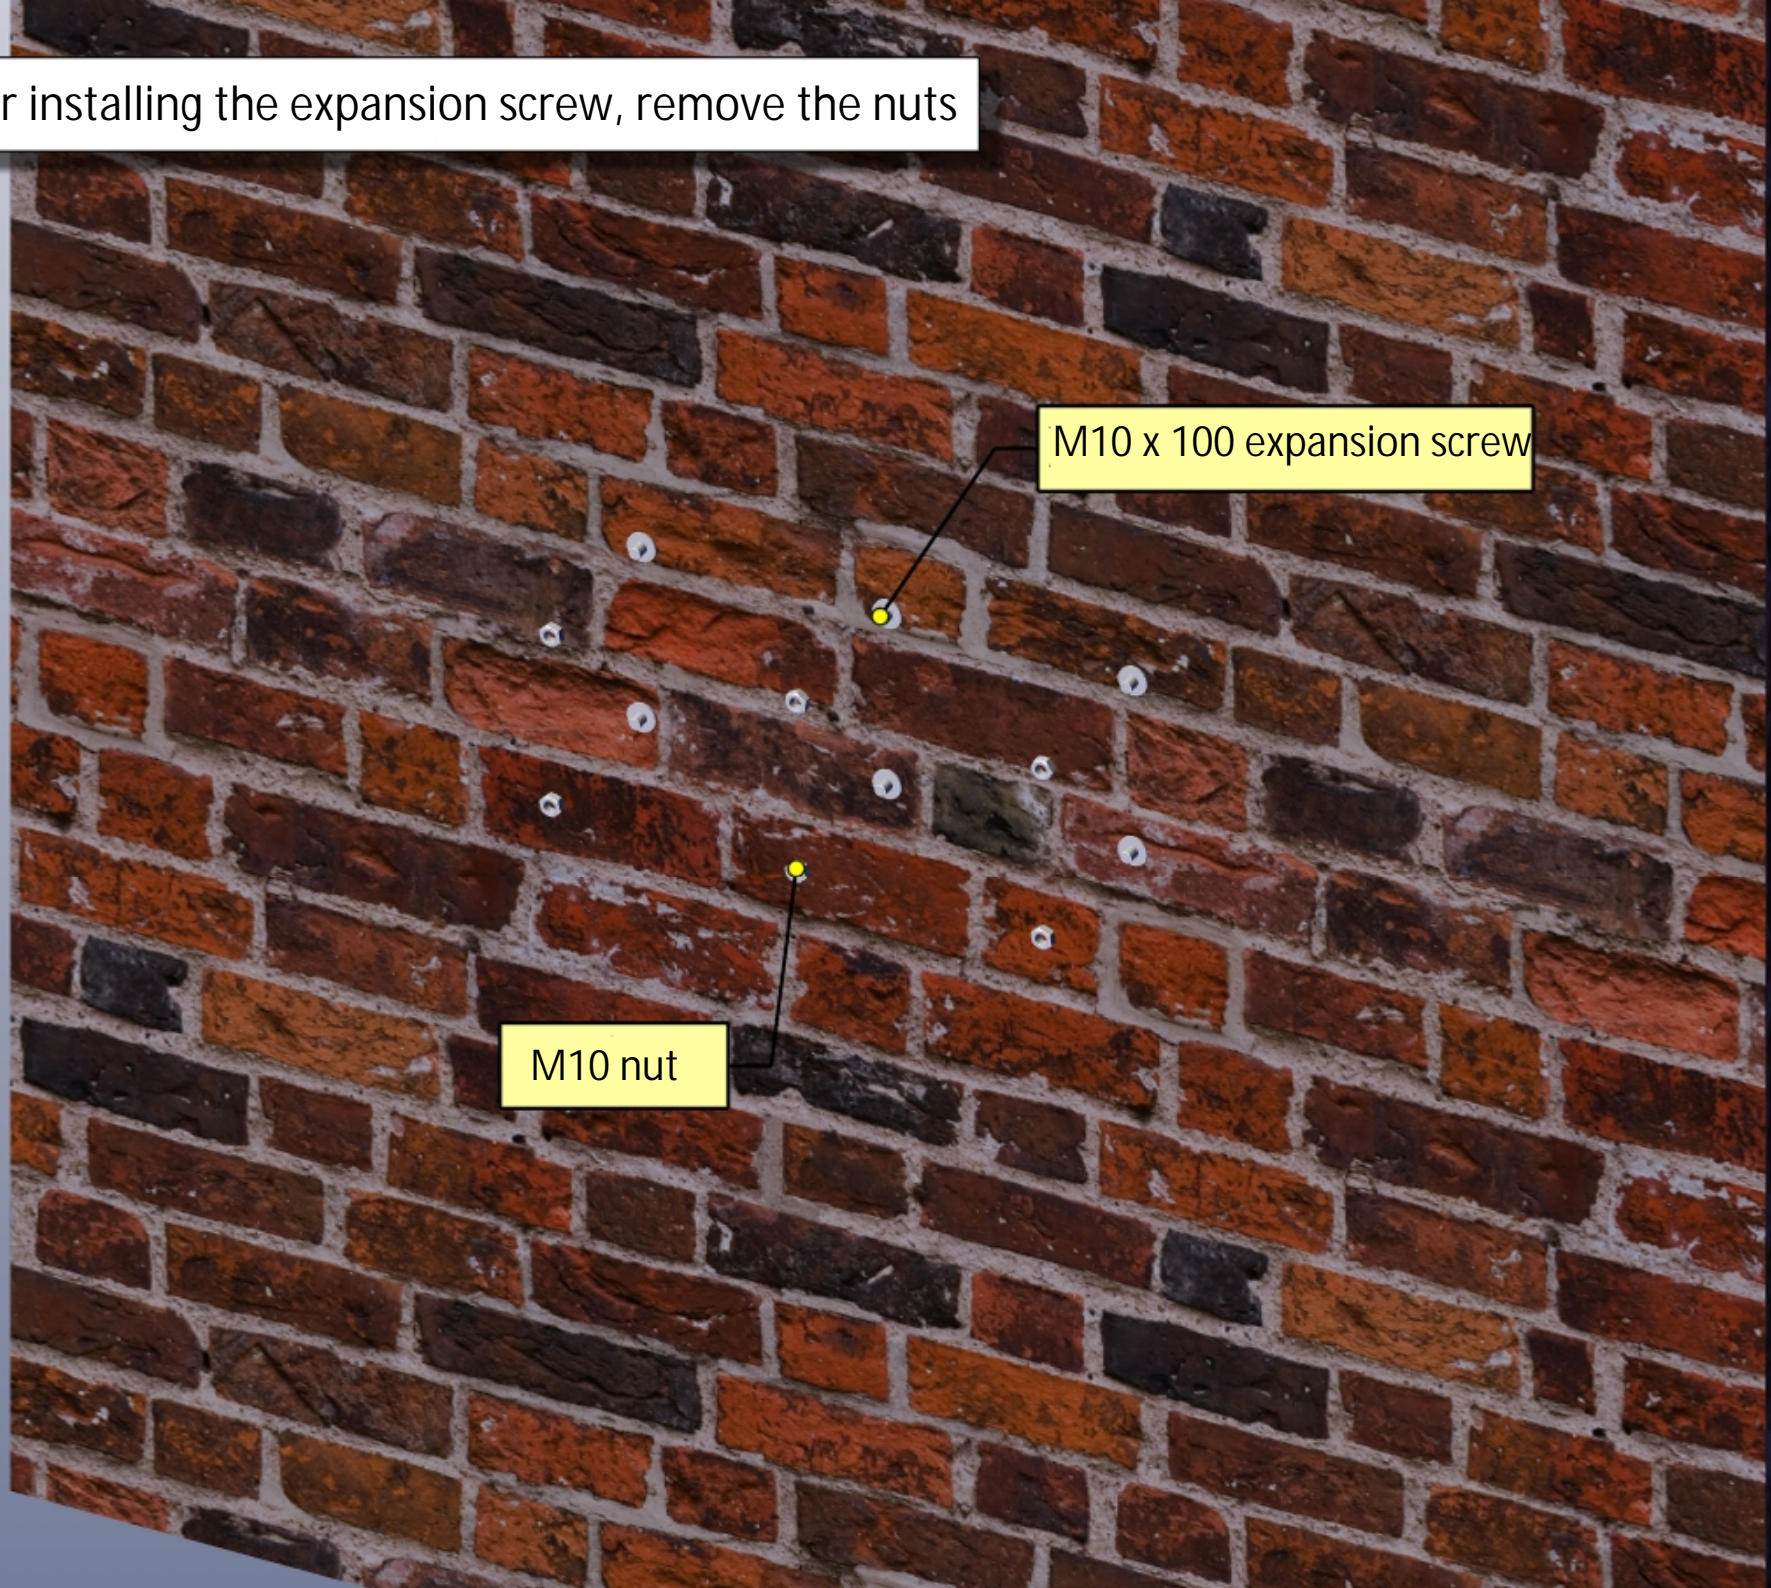
M10 x 100 expansion screws

4. After installing the expansion screw, remove the nuts

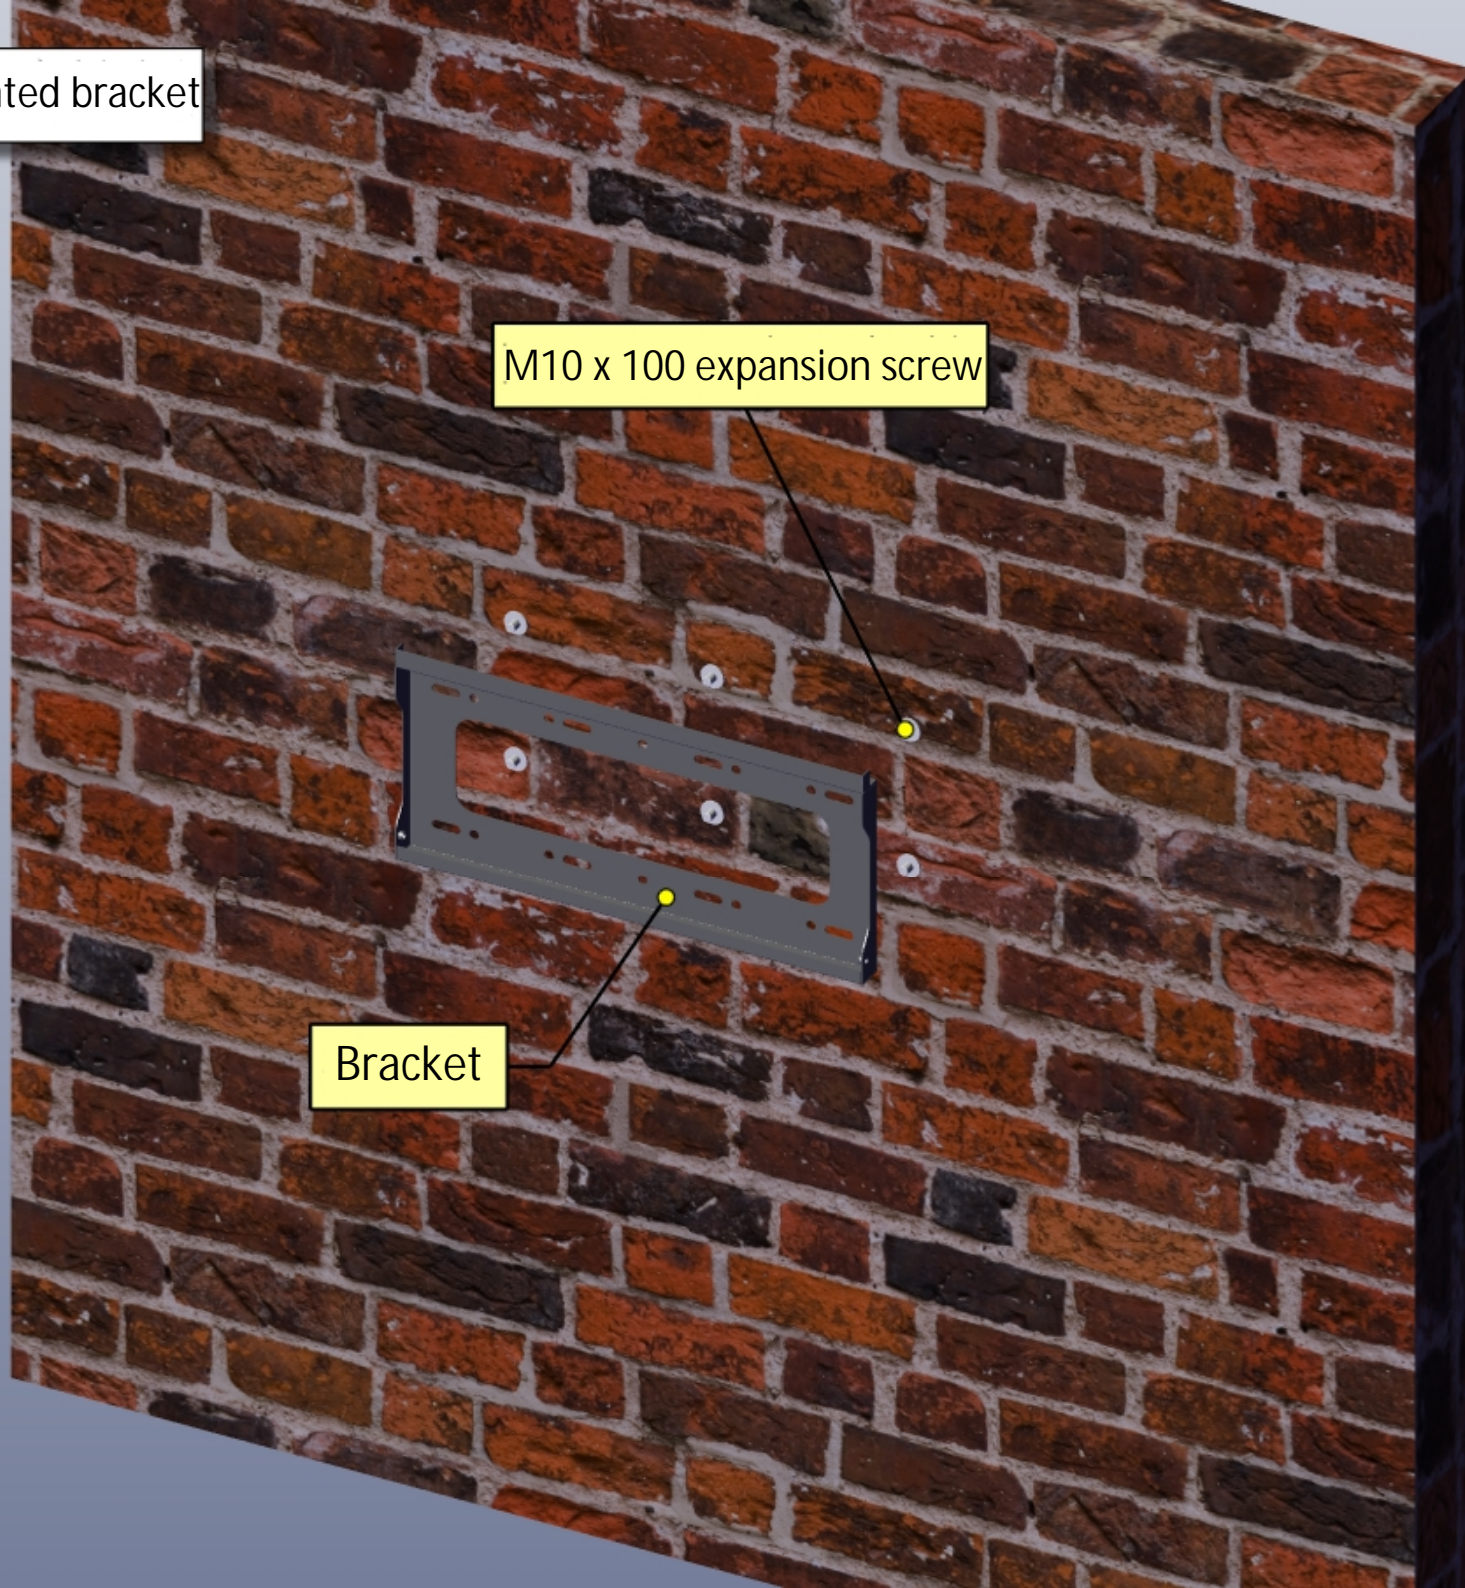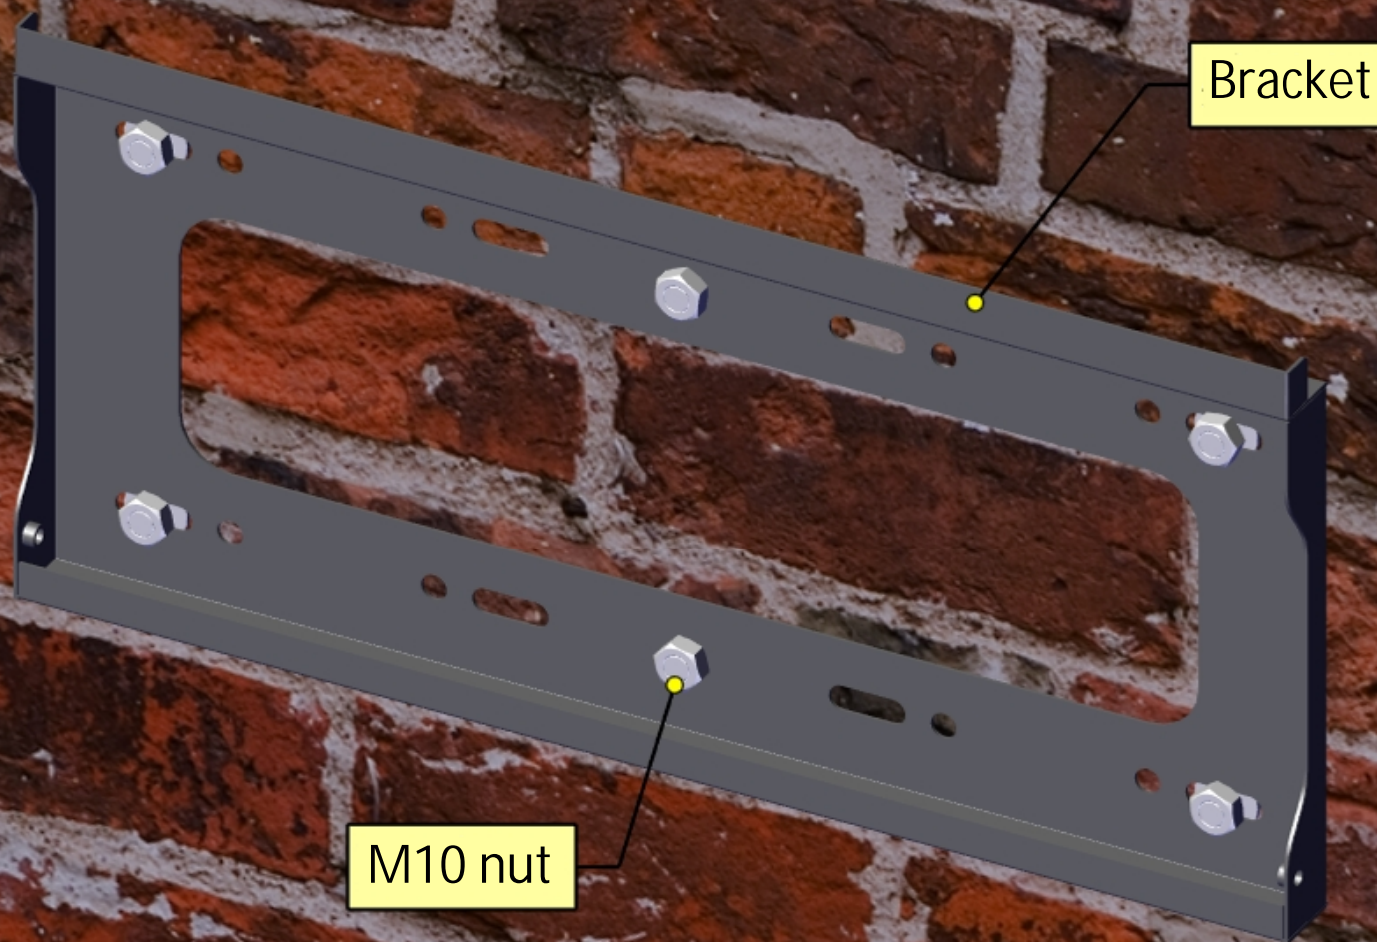M10 x 100 expansion screw

M10 nut

5. Install wall-mounted bracket
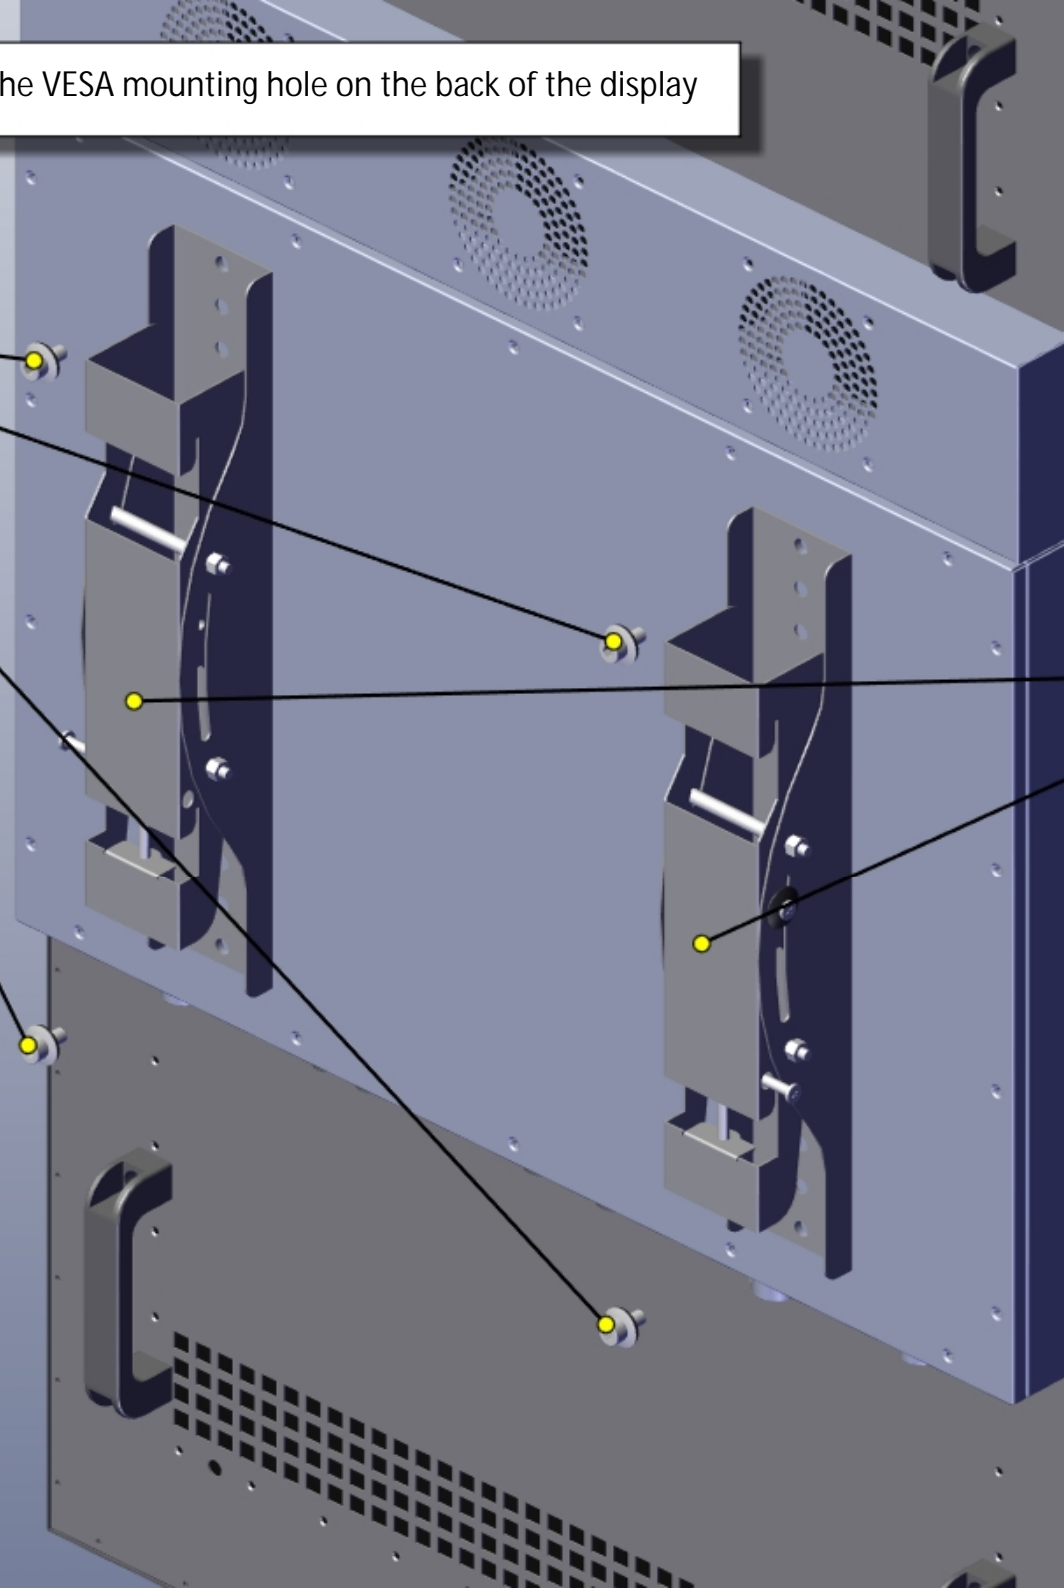
M10 x 100 expansion screw

Bracket

6. Align the wall-mounted bracket with the expansion bolts and tighten the nuts
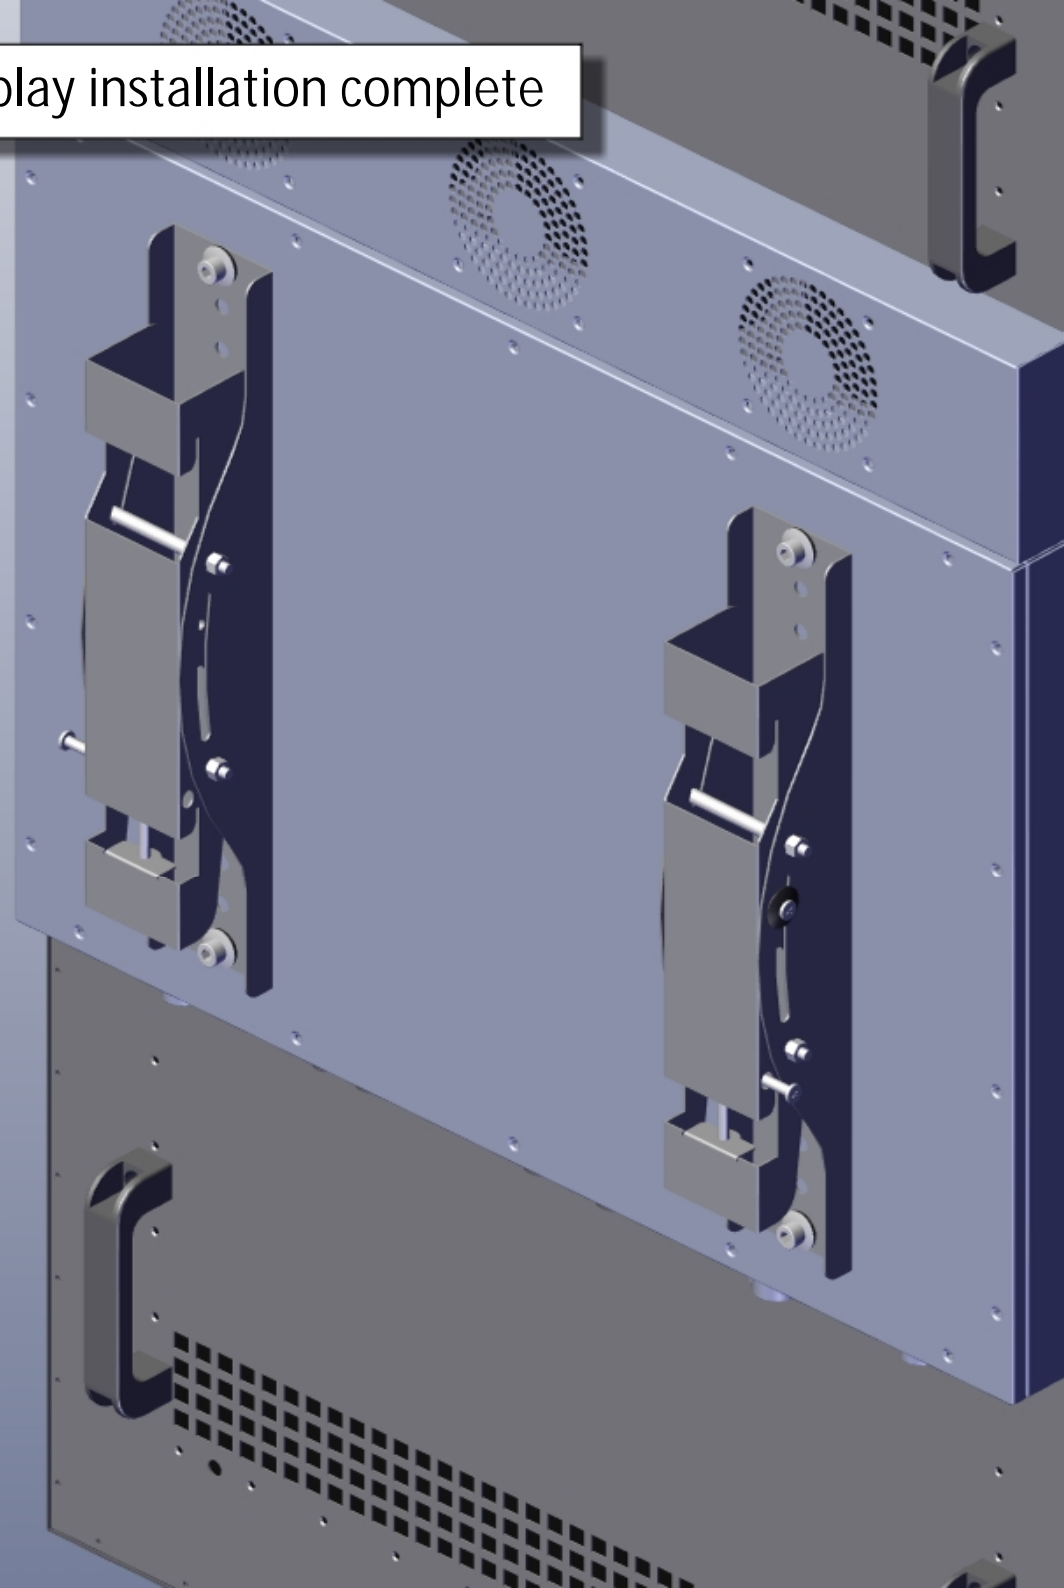
Bracket

M10 nut

7. The hook assembly is secured to the VESA mounting hole on the back of the display
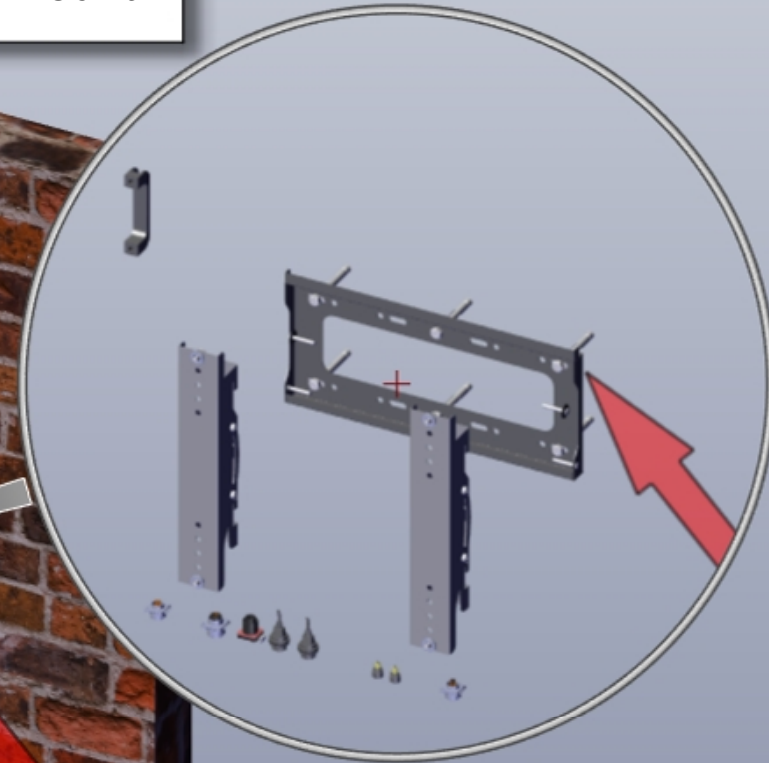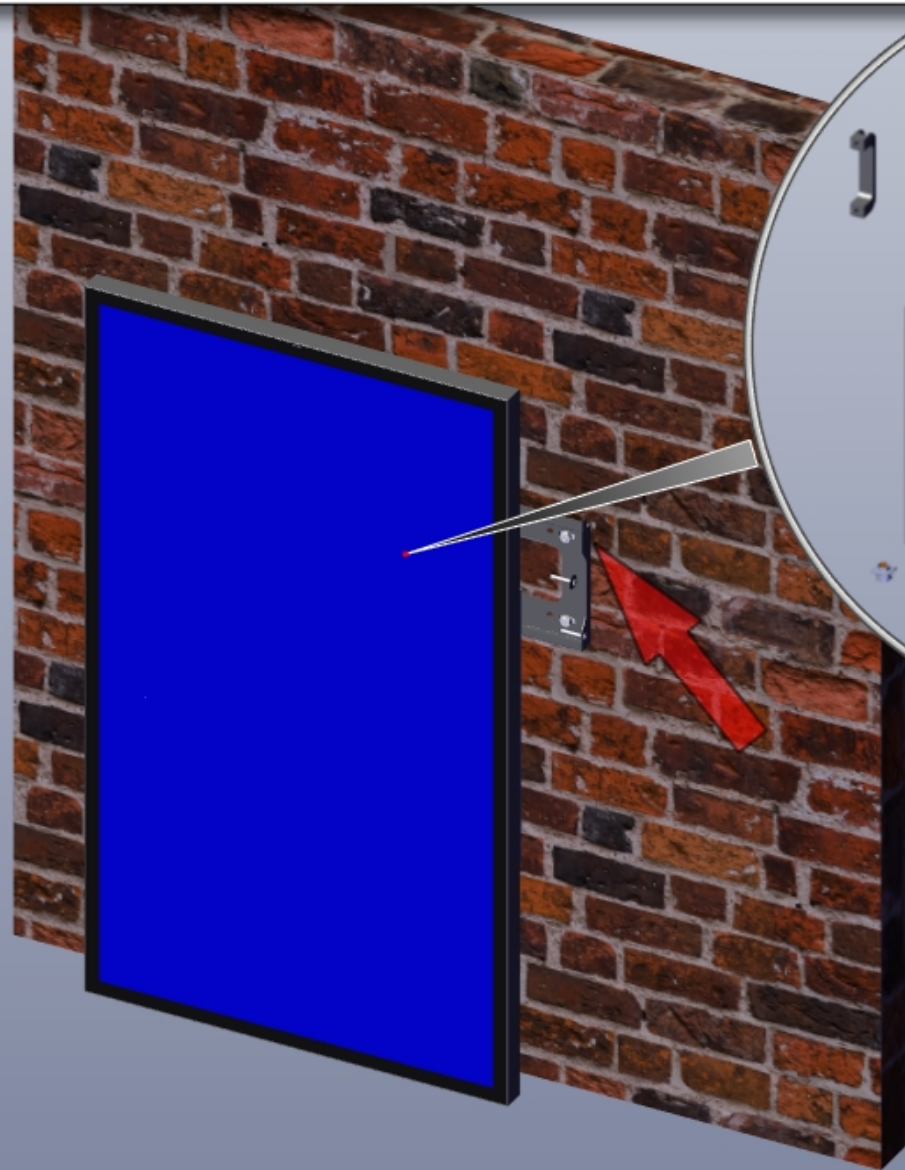
M8 x 10 304 stainless steel screws

Hook assembly

8. Hook assembly and display installation complete

9.Connect the electrical cables before mounting the display on the wall.
Lift the display, align it with the hook slot, and install it on the wall mount

10. Installation complete